

OPERATOR'S MANUAL

Auxiliary Engine Pallet

40 Hp Engine-Driven Hydraulic Power Pack



QUALITY YOU CAN SEE, PEOPLE YOU CAN TRUST™



M-B Companies, Inc.
1615 Wisconsin Ave.
P. O. Box 200
New Holstein, WI 53061-0200
(920) 898-1560 or 800-558-5800
FAX: (920) 898-4588

Publication: AEP-070111
07/31/12

TABLE OF CONTENTS

INTRODUCTION	3
Operator's Manual	3
Identification Numbers	3
SAFETY.....	4
Safety Alerts.....	4
Safety Decals.....	5
Pre-Start Guidelines.....	4
Operation Guidelines	4
Maintenance Guidelines	5
ASSEMBLY	6
CONTROLS AND FEATURES	7
OPERATION.....	10
Pre-Start Checks.....	10
Remote Transmitter	10
Starting The Engine	10
Running The Broom.....	10
Shutting Off The Engine.....	10
Transporting	10
MAINTENANCE	11
Maintenance Schedule	11
Lubrication	11
Pressure Manifold	12
Installing a new Transmitter or Receiver.....	12
STORAGE	13
Storage	13
TROUBLESHOOTING	14
SERVICE PARTS	17
WARRANTY	18

INTRODUCTION

OPERATOR'S MANUAL

You must read, understand and comply with all the safety and operating instructions in this manual before attempting to set-up and operate the Auxiliary Engine Pallet.

Failure to comply with the safety and operating instructions can result in loss of machine control, serious personal injury to you and/or bystanders, and risk of equipment and property damage.

IDENTIFICATION NUMBERS

When contacting your authorized dealer for information, replacement parts or service, you **MUST** have the model and serial number of your unit.

Record the serial number in the space provided. The serial number plate/decals can be found in the location shown in Figure 1.

Model Name/Number:	
Date Purchased:	Serial #:



Figure 1



SAFETY

SAFETY ALERTS

Signal words and alert symbols notify of important safety precautions.

DANGER!

Indicates a hazardous situation which, if not avoided, will result in serious injury or death.

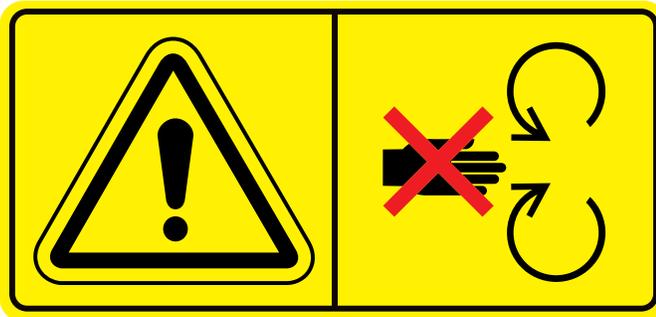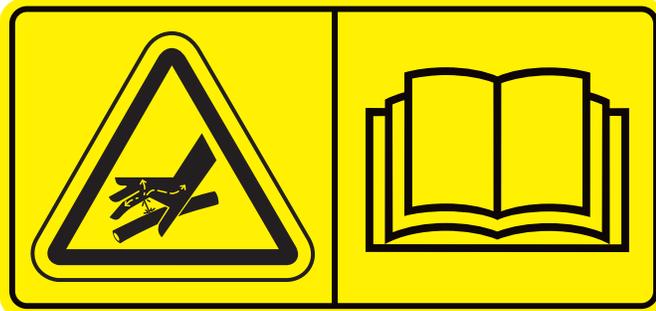

WARNING!

Indicates a hazardous situation which, if not avoided, could result in serious injury or death.



CAUTION!

Indicates a hazardous situation or unsafe practice which, if not avoided, could result in minor or moderate injury or property damage.



SAFETY DECALS

Reading this manual and the safety instructions it contains will provide you with the necessary basic knowledge to operate this equipment safely and effectively. We have also placed several safety labels on the unit to remind you of this important information while you are operating your unit.

All DANGER, WARNING, CAUTION, and instructional messages on your unit should be carefully read and obeyed. Bodily injury can result when these instructions are not followed. The information is for your safety and it is important.

These labels will act as a constant visual reminder to you, and others who may use the equipment, to follow the safety instructions necessary for safe, effective operation.

If any of these labels are lost or damaged, replace them at once. See your local dealer for replacements.

PRE-START GUIDELINES

- Install any covers or guards which may have been removed for shipping purposes.
- Before starting equipment, walk around equipment, making a visual inspection that all safety devices are properly installed and secured.
- Check that all hardware, fasteners, hydraulic fittings, etc. are in good condition and properly fastened. Replace any fatigued or damaged items with proper replacements.
- Personnel who are not required to be in the work area should be kept away. Never start the equipment unless you are absolutely certain that everyone in the area is clear of the machine and aware it is being started.
- Follow the manufacturer's recommended start-up procedure.

OPERATION GUIDELINES

Read, understand and follow all instructions in the manual and on the unit before starting.

- To avoid serious injury or death, do not modify equipment. Any modifications made to equipment can be dangerous and can void equipment warranty.
- Never operate equipment with covers or guards removed. Rotating parts can cause severe injury. Keep hands, feet, hair, jewelry and clothing away from all moving parts.
- Never defeat a safety device to make a task easier.
- Always wear proper apparel when operating equipment; safety glasses, face shield or goggles, ear protection, and dust mask. Tie hair back. Never wear loose clothing or jewelry that could get caught in moving parts.
- Only allow responsible adults who are familiar with the instructions, to operate the unit (local regulations can restrict operator age).
- Clear the area of objects such as rocks, toys, wire, etc., which could be picked up and thrown.

SAFETY

- Be aware of surroundings. Be sure the area is clear of other people, bystanders or pets. Stop unit if anyone enters the area.
- Always look down and behind before and while traveling in reverse.
- Be aware of discharge direction and do not point discharge at anyone. Do not point the discharge at glass enclosures, automobiles, or windows.
- Always stand clear of the discharge area when operating this unit.
- Disengage all clutches and PTO's before starting engine.
- Never leave a running machine unattended. Always disengage the attachment and traction controls, lower the attachment, set the park brake, stop the engine and remove the ignition key before leaving the machine.
- Operate only in daylight or good artificial light.
- Never carry passengers.
- Do not operate the unit while under the influence of drugs, alcohol or other medication.
- Watch for traffic when operating near or crossing roadways.
- Use extra care when loading or unloading the unit into a trailer or truck.
- Keep in mind the operator is responsible for accidents occurring to other people or property.
- Data indicates that operators, age 60 years and above, are involved in a large percentage of power equipment-related injuries. These operators should evaluate their ability to operate the unit safely enough to protect themselves and others from injury.
- All operators should seek and obtain professional and practical instruction.
- Protect eyes, face and head from objects that may be thrown from unit. Wear appropriate hearing protection.
- Always wear substantial footwear and appropriate clothing. Wear footwear that improves traction on slippery slopes. DO NOT wear long scarves or loose clothing that could become entangled in moving parts.
- Abnormal Vibrations are a warning of trouble. Striking a foreign object can damage unit. Stop unit and engine. Wait for all moving parts to stop. Inspect unit and make any necessary repairs before restart.
- Never place your hands or any part of your body or clothing inside or near any moving part while unit is running.
- Stop engine before: refueling, cleaning, making adjustments or removing the attachment assembly.
- Follow the drive unit manufacturer's recommendations for wheel weights or counter weights.
- Make any adjustments before operating unit.
- Do not touch parts which may be hot from operation. Allow such parts to cool before attempting to service the unit.
- Before using, always visually check that hardware is present, intact and secure. Replace worn or damaged parts.
- Never operate the machine with damaged guards, or without safety protective devices in place.
- Follow the manufacturer's recommendations for towing weight restrictions and procedures.
- Original purchaser of this unit was instructed by the seller on safe and proper operation. If unit is to be used by someone other than original purchaser; loaned, rented or sold, ALWAYS provide this manual and any needed safety training before operation.

- The Operator must understand the functions and parameters of all controls and how to operate, as well as how to STOP in an Emergency.

NOTE: All reference to left, right, front, or rear are given from the operator position and facing forward.

MAINTENANCE GUIDELINES

- Maintain or replace safety and instruction decals/labels as necessary.
- Never run a unit in an enclosed area.
- Keep nuts and bolts tight and keep equipment in good condition.
- Never tamper with safety devices. Check their proper operation regularly and make necessary repairs if they are not functioning properly.
- Keep unit free of debris and build-up. Clean up any oil spillage.
- Never make adjustments or repairs with the engine running unless specified otherwise in the engine manufacturer's manual.
- Components are subject to wear, damage, and deterioration. Frequently check components and replace with the manufacturer's recommended parts, when necessary.
- Check control operation frequently. Adjust and service as necessary.
- Use only factory authorized parts when making repairs.
- Always comply with factory specifications on all settings and adjustments.
- Only authorized service locations should be utilized for major service and repair requirements.
- Never attempt to make your own repairs on this unit unless you have been properly trained. Improper service procedures can result in hazardous operation, equipment damage and voiding the manufacturer's warranty.
- Stop engine on tractor and set parking brake before performing any adjustments on the machinery.
- Do not disassemble a pressurized system unless properly trained and equipped with adequate tooling.
- Escaping hydraulic fluid under pressure can have sufficient force to penetrate the skin, causing serious injury. Before operation, be sure that all hydraulic connections are tight and hoses are not damaged. Relieve pressure in system before making adjustments.
- Oils and fluids can be very hot under pressure. Use caution and allow the system to cool before beginning maintenance work.
- Never operate or pressurize one of these systems with worn or damaged components. Replace hoses, fittings, valves or other components which appear defective.
- Never adjust pressurized systems beyond recommended levels to achieve higher operating pressures.
- NEVER search for hydraulic leaks with only your hands. Use cardboard or a piece of wood.
- For engine equipped models, follow specific engine manufacturer's recommended service intervals for dirty/dusty environments.

ASSEMBLY

The auxiliary engine pallet is shipped fully assembled. The remote transmitter with batteries is secured to the top of the unit.

1. Remove packing materials. Inspect the unit for damage. If any damage is visible contact M-B Company before adding fluids or attempting to start the hydraulic power pack.
2. Insert the batteries into the remote transmitter. The green LED should blink two times per second when transmitter and receiver are communicating properly. Refer to the section on remote transmitter.
3. Fill hydraulic reservoir with ISO 32 or greater hydraulic fluid to the proper level. Fill to approximately 3/4 full on level/temp sight gauge. If operating in temps of 0-40°F (-17-4°C) use ISO 32 cold weather type fluid or Dextron III ATF.
4. Connect hydraulic hoses to attachment. Remove caps and store in safe location for future use or for servicing. Connect hydraulic lines for angle and raise functions as required for use with the specific attachment. Connect hydraulic motor hoses "M" for motor high pressure and "MT" for motor low pressure (return to tank). See Figure 2.

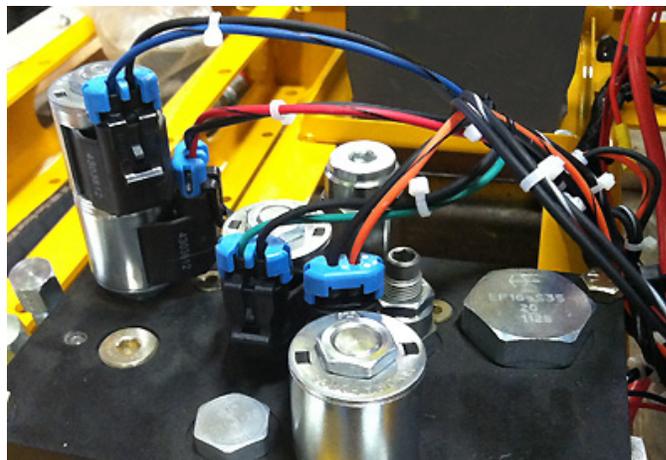


Figure 3

8. Once the engine pallet power pack has been properly set-up, refer to the OPERATION section within this manual to operate for a 15 minute break-in period. Cycle all the controls several times while running the broom to remove any air in the hydraulic system.
9. After this break-in period, check oil levels in the hydraulic reservoir and engine. Refer to the engine manufacturer's Owner/Operator Manual for specific guidelines.

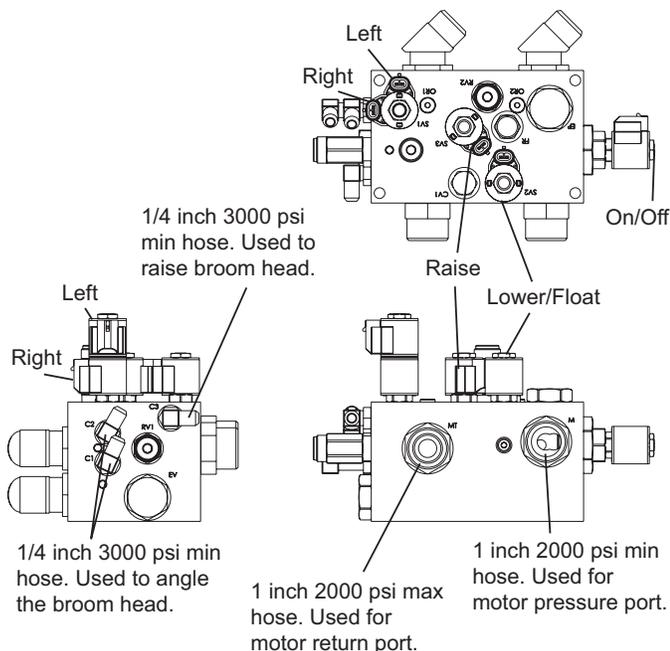


Figure 2

5. Fill fuel tank with fuel. Refer to the engine owner/operator manual for the correct type and grade of fuel.
6. Check connections at battery posts. Black negative (-) cable to negative (-) posts. Red positive (+) cable to positive (+) post. Tighten connections.
7. Verify all other electrical connections have not come loose or detached during shipment (Figure 3).

CONTROLS AND FEATURES



1. Hydraulic Fluid Sight Gauge
2. Fuel Cap
3. Hydraulic Fluid Cap
4. Engine Exhaust Outlet
5. Engine Access Panel
6. Electric/Hydraulic Valve Assembly
7. Fuel Sight Gauges
8. Main Power Switch

Figure 4


CONTROLS AND FEATURES



1. Hydraulic Fluid Filter
2. Hydraulic Cooling Fan
3. Battery Access Panel

Figure 5

CONTROLS AND FEATURES

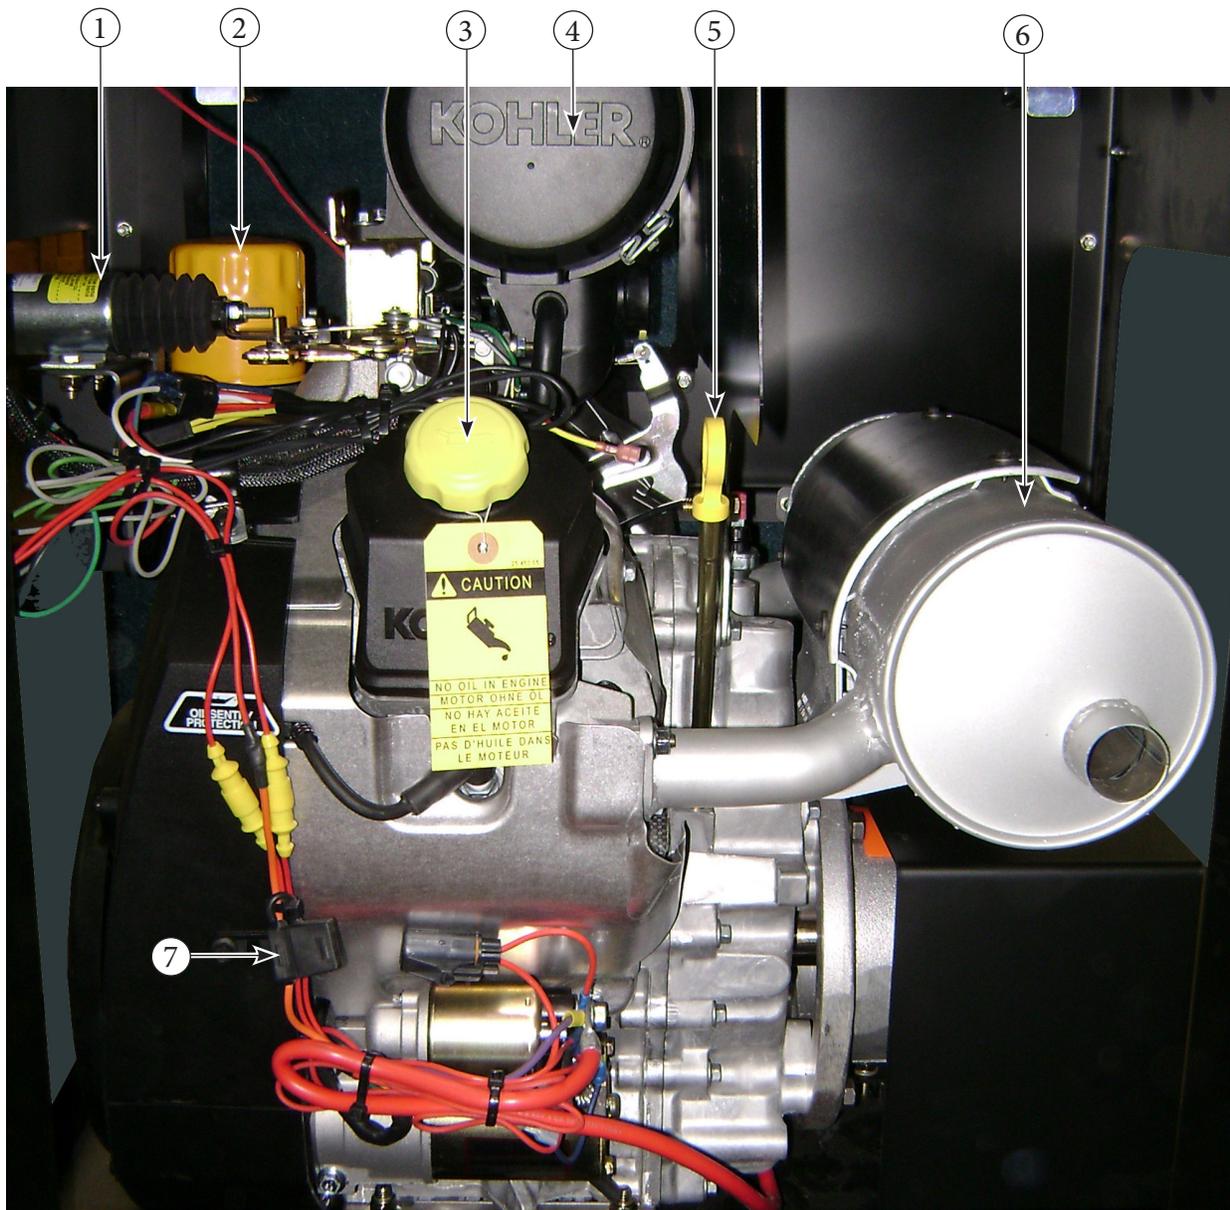

1. Engine Throttle & Choke Solenoids (2)
2. Engine Oil Filter
3. Engine Oil Fill Cap
4. Engine Air Cleaner
5. Engine Oil Level Dipstick
6. Engine Exhaust Muffler
7. 10 Amp Control Harness Fuse

Figure 6

OPERATION

PRE-START CHECKS

1. Visually inspect equipment and mounting hardware to ensure that all parts are secure and tightened properly.
2. Check fasteners that secure power pack to mobile equipment.
3. Check for oil leaks and loose hose connections.
4. Check electrical connections.
5. Check that filters are free of any dirt and debris that would restrict air flow.

REMOTE TRANSMITTER

The remote transmitter has buttons to run the engine and control broom functions. There are two LED's that blink to indicate communication status.

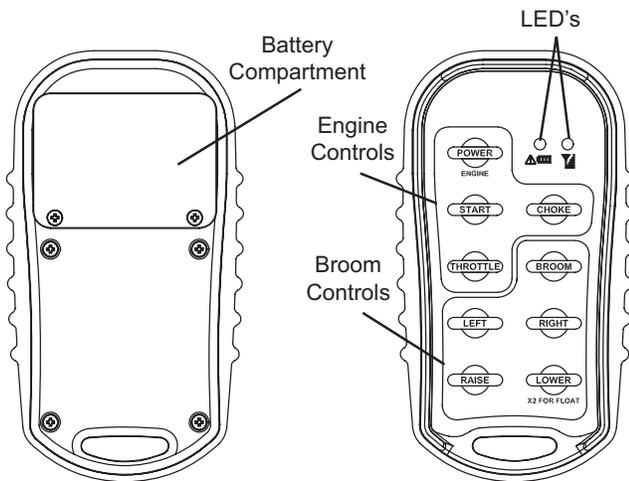


Figure 7

Two AA Alkaline batteries will provide approximately 30 hours of continuous operation.

Activate the remote by pressing and holding the POWER button for at least 2 seconds and release. To turn off the remote and turn off the engine, press and hold the POWER button for more than 3 seconds. The transmitter is designed with a power saving feature which turns the transmitter off after 4 hours if no buttons are pressed.

There are red and green LED's both on the keypad of the transmitter and inside the receiver case. The green LED will blink 2 times per second when the transmitter and receiver are communicating. It will blink 1 time per second if there is no communication (i.e. - no power to the receiver).

STARTING THE ENGINE

1. Turn the remote transmitter on by pressing the POWER button.
2. Move the main power switch, on the top of the unit, to the ON position (switch will light up red).
3. Press START (and CHOKE if needed). Release buttons when engine starts. When the engine starts the speed will be at the high setting.
4. Use the THROTTLE button to toggle between high and low engine speed.

RUNNING THE BROOM

1. When the engine is warmed up, press the BROOM button to start the broom.

CAUTION!



Do not operate engine pallet product at temperatures above 80°F (26.6°C). Engine Warranty will be voided!

NOTE: If the hydraulic fluid is cold, allow the broom to idle for 10 minutes. If the carrier vehicle is equipped with a lift cylinder, raise the broom off of the ground.

2. To change the angle of the broom head, press and hold the LEFT or RIGHT button. When the button is released the movement will stop.
3. If the carrier vehicle is equipped with a lift cylinder, the RAISE and LOWER buttons will lift the broom head and lower it.

SHUTTING OFF THE ENGINE

1. Press the BROOM button to turn off the broom.
2. Lower the engine idle by pressing THROTTLE.
3. Let the engine idle for 5 minutes or until the hydraulic cooling fan turns off.
4. Press and hold the POWER button on the remote transmitter for more than 3 seconds to turn off the engine and transmitter.
5. Move the main power switch, on the top of the unit, to the OFF position. The switch will go from red to clear.

TRANSPORTING

Use the forklift openings on either end of the engine pallet for transporting. Use the lift hook holes for hoisting (Figure 8).

DANGER!



Do not lift the unit using the engine housing. This item could fail and the unit could drop.



Figure 8

MAINTENANCE

MAINTENANCE SCHEDULE

DANGER!



Keep hands and clothing away from moving parts!
Components may be hot from use!
Oil cooler fan may turn ON even with engine OFF!
Only perform Service with engine OFF, battery disconnected and after allowing hot parts to cool.

WARNING!



Fluid escaping under pressure can puncture the skin and cause serious injury. Do not touch any hydraulic components until the engine has been turned off, hydraulic system depressurized and components disconnected.

LUBRICATION

NOTE: Grease points are noted with an applicable decal.



- Grease bearings and pivot points per the MAINTENANCE SCHEDULE using Chevron Ultra Duty II, Grade 2; or equivalent high-temp grease.
- Use an ISO 32 or greater hydraulic fluid. If operating in temps of 0-40°F (-17-4°C) use ISO 32 cold weather type fluid or Dextron III ATF.

Service Performed	Before Each Use	Daily (8 Hrs)	Every 25 Hours	Every 50 Hours	Every 250 Hours	Annually
Inspect all fasteners and mounting hardware and tighten as necessary.	•					
Check for loose hydraulic connections.	•					
Check engine oil level and fill as necessary.	• ¹					
Inspect engine air filter.			• ²			
Check hydraulic oil level and fill as necessary.	•					
Check adjustments.		•				
Inspect and clean oil cooler of debris.			•			
Replace hydraulic oil filter.					•	
Replace hydraulic oil.						•

¹ Replace per engine manufacturer's requirements.

² Increase frequency to Daily (8 Hrs) if operating in dusty environment.

NOTE: Maintenance pertaining to replacing oil and oil filter only refers to the independent hydraulic systems provided by M-B Co. Refer to the engine manufacturer's guidelines for maintenance intervals and proper care of engine.

MAINTENANCE

PRESSURE MANIFOLD

Broom performance is controlled by the hydraulic pressure. The valve assembly is preset at the factory. M-B Co recommends that this setting is not changed without consulting with M-B Customer Service.

If the engine is stalling under load or overheating turn the unit off. Contact M-B Customer Service at 800-558-5800 Attachments Division.

INSTALLING A NEW TRANSMITTER OR RECEIVER

Each transmitter and receiver pair is synchronized together at the factory. If a new transmitter is needed, synchronizing is required. Refer to Figure 9 and use the following procedure:

1. Remove the cover of the receiver, making sure the power is applied.
2. Place the jumper across the address code jumper for >4 seconds. Both LED's will toggle at this point. Remove the jumper and store it on one pin.
3. On the transmitter, press and hold the POWER button, CHOKE button and RAISE button. Release all buttons. Both LEDs will blink together at this point.
4. Wait for a few seconds until the green LEDs begin to blink.
5. Synchronizing complete.
6. Replace the cover on the receiver.

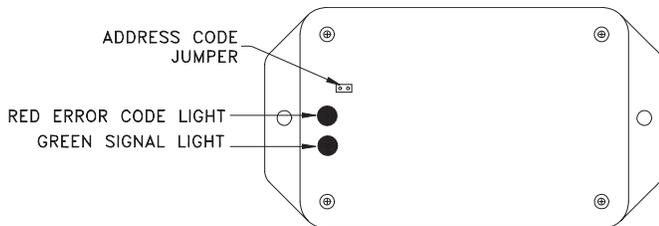


Figure 9

STORAGE

STORAGE

- Store the unit in a location out of the sun and weather to prolong paint life.
- The hydraulic oil reservoir can become contaminated with moisture if the unit is not properly stored. Be sure oil reservoir cap is free from debris and accumulated snow before storing.
- The oil cooler fins should be inspected and cleaned if needed.

CAUTION!



Do not use high pressure water or steam on the cooling fins. The fins will become damaged and reduce cooling capability.

- Disconnect the battery cables from the battery in the unit if it is going to be stored for more than a week.
- Properly clean the unit before storage and remove dirt, debris, salt, etc. to extend paint life.
- The engine has an oil cooler. See engine manual for recommended oil cooler cleaning intervals.
- If the unit is power-washed, all lubrication points should be greased before storage.
- Disconnect all electrical connections between the engine pallet and prime mover for extended storage to prevent battery drain.
- Prevent water from entering the filters and inspect them if contamination is suspected.


TROUBLESHOOTING

Trouble	Possible Cause	Remedy																						
Reduced or No hydraulic flow	<ol style="list-style-type: none"> 1. Electric/manual valve not functioning or turned on. 2. No hydraulic pressure/flow. 3. ON/OFF Solenoid failed. 4. Engine Throttle switch at LOW RPM. 5. Throttle solenoid out of adjustment. 	<ol style="list-style-type: none"> 1. Check electrical connections. 2. Check hydraulic pump coupler. 3. Check solenoids. 4. Operate in HIGH Throttle. 5. Adjust to maintain throttle position. 																						
No hydraulic pressure	<ol style="list-style-type: none"> 1. Pump seal failure. 2. Pump drive coupler failing. 3. Hydraulic oil level low. 	<ol style="list-style-type: none"> 1. Check pump operation. 2. Check pump coupler. 3. Check and fill reservoir to proper level. 																						
Engine shuts down	<ol style="list-style-type: none"> 1. Power demand overloading engine. 2. Low engine Oil. 3. Engine Overheating. 4. Engine Throttle switch at LOW RPM. 	<ol style="list-style-type: none"> 1. Operate per instructions. Call M-B Customer Support 2. See Engine Manual. 3. See Engine Manual. 4. Operate per instructions. 																						
Driven unit does not lift or angle.	<ol style="list-style-type: none"> 1. Electric/manual valve not functioning. 2. No hydraulic pressure/flow to function. 3. Valve solenoids failed. 	<ol style="list-style-type: none"> 1. Check electrical connections. 2. Check hydraulic circuit operation and fluid level. 3. Check solenoids. 																						
Pump making noise or leaking fluid.	<ol style="list-style-type: none"> 1. Pump intake blocked. 2. Shaft seal leaking 3. Pump suction pulling in air. 	<ol style="list-style-type: none"> 1. Check inlet lines for obstructions. 2. Check and repair as necessary. 3. Check suction line and tighten clamps, check hydraulic oil level. 																						
Engine hesitating or stalling.	<ol style="list-style-type: none"> 1. Hydraulic relief pressure too high. 2. Power demand overloading engine. 3. Engine fuel or air delivery problem. 4. Too cold to operate. 	<ol style="list-style-type: none"> 1. Adjust to factory setting. 2. Operate per instructions. 3. Consult engine manual. 4. Allow engine to warm-up. 																						
Engine does not start.	<ol style="list-style-type: none"> 1. Fuse blown (Figure 10 Fuse Location and Figure 11 Wiring Harness). 2. Battery low or disconnected. 3. Poor electrical ground. 4. Starter worn out. 5. Engine flooded with fuel. 6. Engine too hot. 	<ol style="list-style-type: none"> 1. Check fuses (Figure 10 Fuse Location and Figure 11 Wiring Harness) 2. Check battery voltage and connections. 3. Check ground wires, repair or clean as necessary. 4. Replace starter. 5. Choke solenoid out of adjustment. 6. See Engine Manual, wait to cool. 																						
Remote control not functioning.	<ol style="list-style-type: none"> 1. Batteries weak. LED blinks once per second. 2. Red LED blinks. 	<ol style="list-style-type: none"> 1. Replace Batteries. 2. Count light blinks between pauses. Check table below for faulty circuit. Then fix circuit <table border="1" style="margin-left: 20px;"> <thead> <tr> <th style="text-align: center;">Error Code</th> <th style="text-align: center;">Probable Cause</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">1</td> <td>Low battery</td> </tr> <tr> <td style="text-align: center;">2</td> <td>Faulty circuit to RUN</td> </tr> <tr> <td style="text-align: center;">3</td> <td>Faulty circuit to START</td> </tr> <tr> <td style="text-align: center;">4</td> <td>Faulty circuit to CHOKE</td> </tr> <tr> <td style="text-align: center;">5</td> <td>Faulty circuit to THROTTLE</td> </tr> <tr> <td style="text-align: center;">6</td> <td>Faulty circuit to RIGHT</td> </tr> <tr> <td style="text-align: center;">7</td> <td>Faulty circuit to LEFT</td> </tr> <tr> <td style="text-align: center;">8</td> <td>Faulty circuit to LOWER</td> </tr> <tr> <td style="text-align: center;">9</td> <td>Faulty circuit to RAISE</td> </tr> <tr> <td style="text-align: center;">10</td> <td>Faulty circuit to BROOM</td> </tr> </tbody> </table> <p style="margin-left: 20px;">Error code number is the number of red light blinks between every pause.</p> 3. Receiver and transmitter not communicating. 	Error Code	Probable Cause	1	Low battery	2	Faulty circuit to RUN	3	Faulty circuit to START	4	Faulty circuit to CHOKE	5	Faulty circuit to THROTTLE	6	Faulty circuit to RIGHT	7	Faulty circuit to LEFT	8	Faulty circuit to LOWER	9	Faulty circuit to RAISE	10	Faulty circuit to BROOM
Error Code	Probable Cause																							
1	Low battery																							
2	Faulty circuit to RUN																							
3	Faulty circuit to START																							
4	Faulty circuit to CHOKE																							
5	Faulty circuit to THROTTLE																							
6	Faulty circuit to RIGHT																							
7	Faulty circuit to LEFT																							
8	Faulty circuit to LOWER																							
9	Faulty circuit to RAISE																							
10	Faulty circuit to BROOM																							

TROUBLESHOOTING

Throttle Relay

Choke Relay

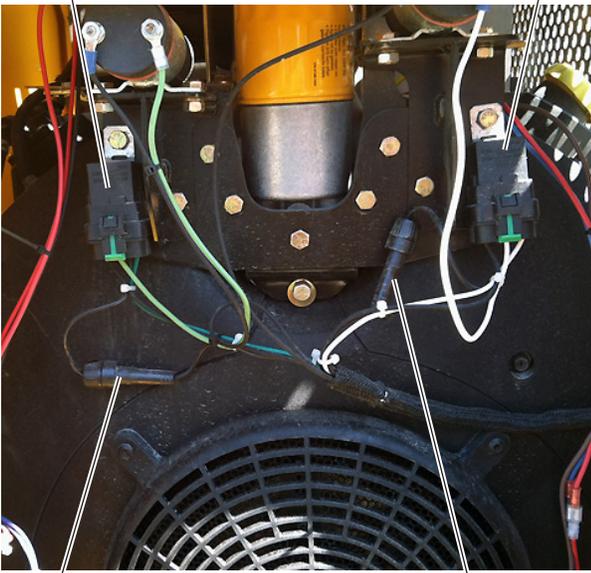

10 AMP Fuse Throttle

10 AMP Fuse Choke

Figure 10 Fuse Location

TROUBLESHOOTING

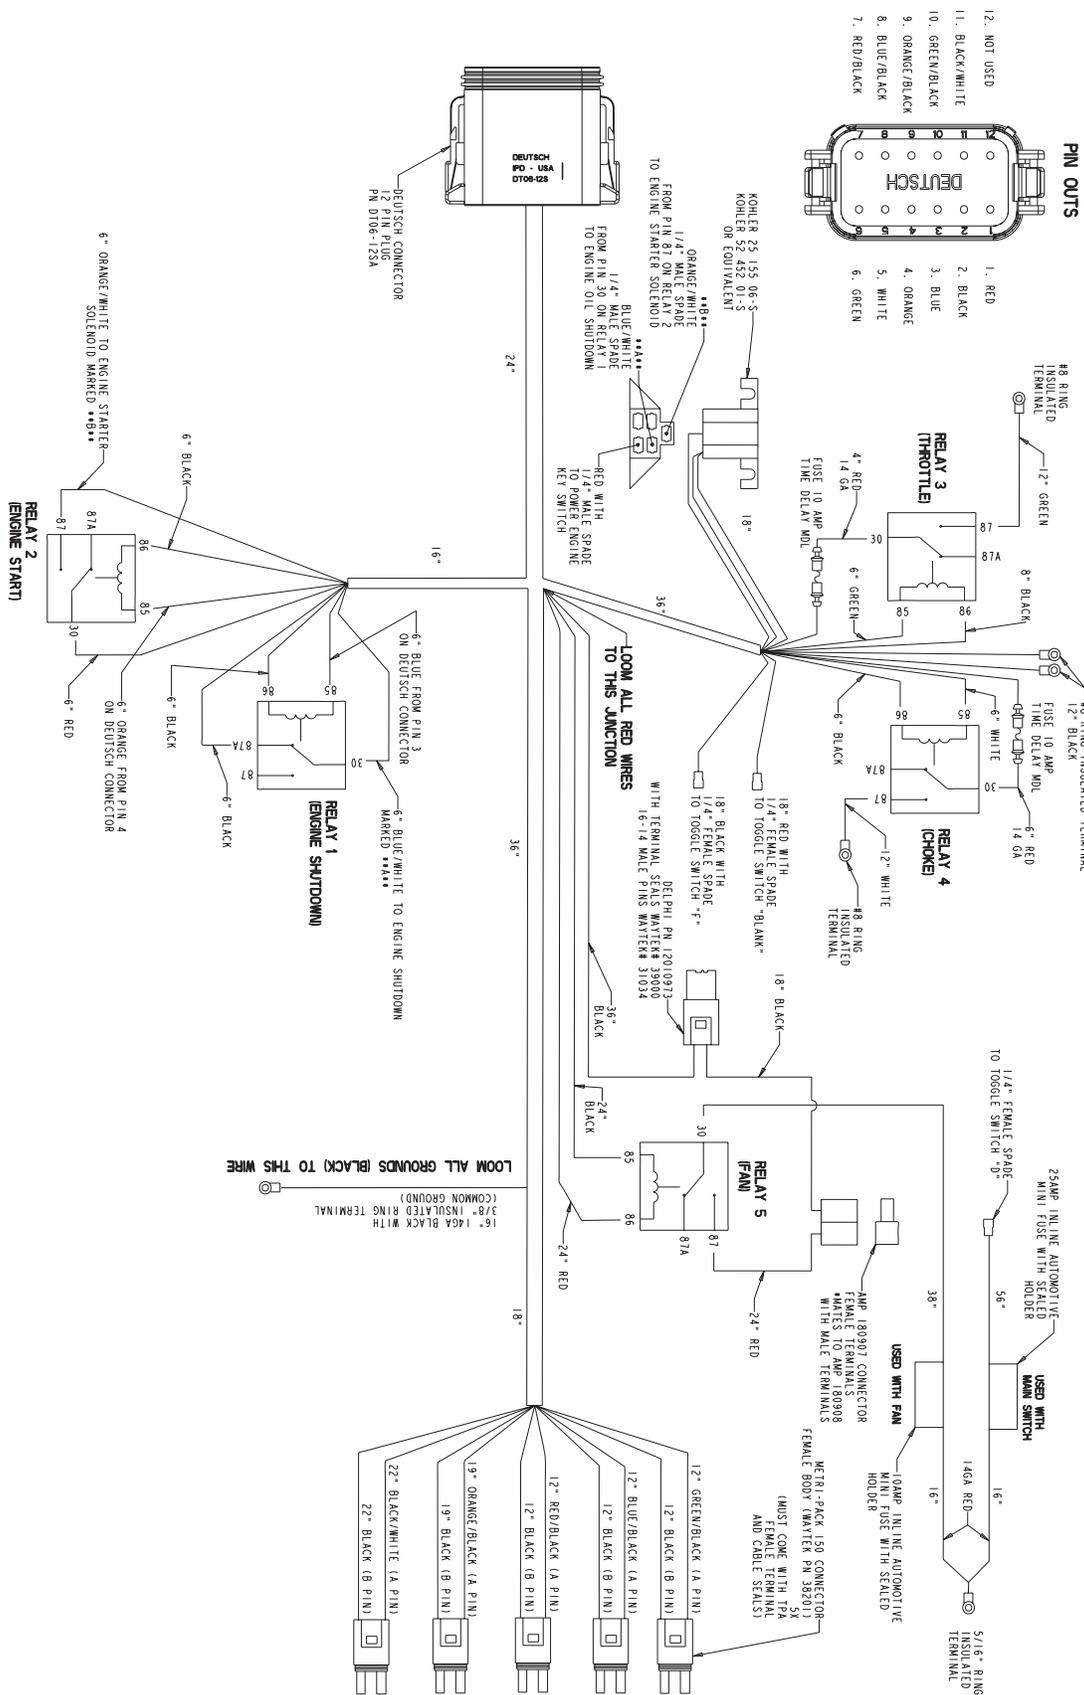


Figure 11 Wiring Harness

SERVICE PARTS

Part Number	Description
202-169388	Hydraulic Valve Assembly
202-160966	• #20 Poppet, 2-Way, N.O.
202-160967	• #16 Pilot Spool Logic Element, 10 PSI
202160968	• #08 Needle Valve
202-160969	• #08 Relief, Diff Area Poppet, 1200 PSI
202-160970	• #08 Relief, Diff Area Poppet, 1400 PSI
202-160971	• #08 Solenoid Valve, N.C.
202-160972	• #08 Check Valve, 25 PSI
206-162431	• #08 Check Valve, 4 PSI
202-160973	• #16 Vented, Spool Logic Element, 10 PSI
202-160975	• #08 Solenoid, Spool, 5-Way, 3-Position
202-147341	• #08 Coil, 12VDC, Metri-Pac, Zener
209-172693	Cap, Filler Neck
209-172248	Suction Strainer, Hydraulic Reservoir
208-169719	Repair Kit, Level/Temperature Sight Gauge, Hydraulic Reservoir
209-160550	Element, Hydraulic Filter Assembly
702-169074	Temperature Sensor, Hydraulic Oil Cooler
200-169556	Seal Kit, Hydraulic Pump
708-169370	Solenoids, Engine Throttle & Choke (2)

Part Number	Description
390-65610	Decal, Gasoline
390-114208	Decal, Hydraulic Oil Reservoir
390-172112	Decal Set (Contains decals below)
390-172112-2	Decal, Caution Hot Surface
390-172112-3	Decal, Caution Moving Parts No Reach
390-172112-4	Decal, Caution Read Manual
390-172112-5	Decal, Hydraulic Fluid Read Manual

Please have your serial number (S/N) ready when contacting M-B Co. or an Authorized Dealer for replacement parts or service information.

M-B Co.
1615 Wisconsin Ave.
P.O. Box 200
New Holstein, WI 53061-0200

website: www.m-bco.com
email: sales@m-bco.com
Phone: 800-558-5800 or 920-898-4203
FAX:

Main 920-898-4588
Attachments 920-898-1085
Brush Dept. 920-898-1082

LIMITED WARRANTY

Limited Warranty: Subject to the limitations set forth herein, M-B Companies, Inc. ("M-B") warrants its products to be free from defects in material and workmanship for a period of twelve (12) months from the date of delivery of the product to its original owner, except that the warranty is twelve (12) months solely for the following products: Truck Mounted Pavement Marking Equipment, Airport Snow Removal Products, Attachment Products, Brushes, MSV Multi-Service Vehicles. Parts shall have a ninety (90) day warranty. This warranty is not transferable without the written consent of M-B.

Notice: M-B's obligations under this Limited Warranty are conditioned on M-B receiving, within the warranty period, written notice from Buyer specifying the nature of any alleged defect and requesting corrective action by Seller.

Remedies: M-B, at its option, will repair or replace, or provide a credit to Buyer for, defective warranted items. If requested by M-B, products or parts for which a warranty claim is made shall be returned, transportation prepaid, to M-B's factory. Buyer shall not return any product for repair, replacement or credit without M-B's advance written consent.

Other Manufacturer's Warranty: On products furnished by M-B, but manufactured by any other manufacturer, the warranty of said manufacturer, if any, will be assigned to Buyer, if the said warranty is assignable. However, M-B does not represent or guarantee that such manufacturer will comply with any of the terms of the warranty of such manufacturer.

Exclusions: Any improper use, operation beyond capacity, or substitution of parts not approved by M-B, or alteration or repair by others in such a manner as in M-B's judgment materially and/or adversely affects the product shall void this warranty. This warranty does not apply to defects caused by damage or unreasonable use while in the possession of the owner, including but not limited to: failure to provide reasonable and necessary maintenance, normal wear, routine tune ups or adjustments, improper handling or accidents, operation at speed or load conditions contrary to published specifications, improper or insufficient lubrication, or improper storage.

Seller manufactures power brooms that mount to many makes and models of equipment. Seller attempts to ensure that the mounting frames fit correctly. However, the large number of tractor models, types and options currently available, compounded by frequent manufacturer design changes, may prevent Seller from supplying a frame that fits every unit correctly. Therefore, unless Buyer supplies drawing which detail the attachment points on the specific unit to which the broom will be mounted, Seller will not be responsible for the fit of the mounting frame.

The batteries, tires, rubber material, brushes and material normally consumed in operation, and major components such as engines, air compressors, and hydraulic pumps and motors are excluded from this warranty but may be covered to the extent of any warranty received by M-B from its supplier if permitted by the terms of such warranty.

Limitations of liability: M-B shall not be liable for any incidental, consequential, punitive or special damages of any kind, including, but not limited to, consequential labor costs or transportation charges in connection with the repair or replacement of defective parts, or lost time profits or expense which may have accrued because of said defect.

M-B disclaims all other warranties, whether express or implied, including but not limited to any implied warranty of merchantability or fitness for a particular purpose. This warranty is exclusive remedy of buyer. This warranty cannot be extended, broadened or changed in any respect except in writing by an authorized officer of M-B.

Notwithstanding anything in this warranty is to the contrary, in no event shall M-B's total liability hereunder exceed the purchased price of the particular product.

AIRPORT SNOW REMOVAL EQUIPMENT
1200 Park Street
Chilton, WI 53014
800-558-5800

PAVEMENT MARKING EQUIPMENT-PA
79 Montgomery Street
Montgomery, PA 17752
888-323-2900

PAVEMENT MARKING EQUIPMENT-OR
2490 Ewald Avenue SE
Salem, OR 97302
800-253-2909

ATTACHMENTS DIVISION
1615 Wisconsin Avenue
New Holstein, WI 53061
800-558-5800



WWW.M-B.CO.COM

KOHLER COMMAND PRO
CH940-CH1000
HORIZONTAL CRANKSHAFT



Safety Precautions

To ensure safe operations please read the following statements and understand their meaning. Also refer to your equipment owner's manual for other important safety information. This manual contains safety precautions which are explained below. Please read carefully.

 **WARNING**

Warning is used to indicate the presence of a hazard that *can* cause *severe* personal injury, death, or substantial property damage if the warning is ignored.

 **CAUTION**

Caution is used to indicate the presence of a hazard that *will* or *can* cause *minor* personal injury or property damage if the caution is ignored.

NOTE

Note is used to notify people of installation, operation, or maintenance information that is important but not hazard-related.

For Your Safety!

These precautions should be followed at all times. Failure to follow these precautions could result in injury to yourself and others.

 WARNING

<p>Explosive Fuel can cause fires and severe burns.</p> <p>Do not fill the fuel tank while the engine is hot or running.</p>

Explosive Fuel!
Gasoline is extremely flammable and its vapors can explode if ignited. Store gasoline only in approved containers, in well ventilated, unoccupied buildings, away from sparks or flames. Do not fill the fuel tank while the engine is hot or running, since spilled fuel could ignite if it comes in contact with hot parts or sparks from ignition. Do not start the engine near spilled fuel. Never use gasoline as a cleaning agent.

 WARNING

<p>Rotating Parts can cause severe injury.</p> <p>Stay away while engine is in operation.</p>

Rotating Parts!
Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate the engine with covers, shrouds, or guards removed.

 WARNING

<p>Hot Parts can cause severe burns.</p> <p>Do not touch engine while operating or just after stopping.</p>

Hot Parts!
Engine components can get extremely hot from operation. To prevent severe burns, do not touch these areas while the engine is running, or immediately after it is turned off. Never operate the engine with heat shields or guards removed.

 CAUTION

<p>Electrical Shock can cause injury.</p> <p>Do not touch wires while engine is running.</p>

Electrical Shock!
Never touch electrical wires or components while the engine is running. They can be sources of electrical shock.

California Proposition 65 Warning
<p><i>Engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.</i></p>

Safety Precautions (Cont.)

 WARNING

Accidental Starts can cause severe injury or death. Disconnect and ground spark plug lead before servicing.

Accidental Starts!

Disabling engine. Accidental starting can cause severe injury or death.

Before working on the engine or equipment, disable the engine as follows:

- 1) Disconnect the spark plug lead(s).*
- 2) Disconnect negative (-) battery cable from battery.*

 WARNING

Carbon Monoxide can cause severe nausea, fainting or death. Avoid inhaling exhaust fumes, and never run the engine in a closed building or confined area.

Lethal Exhaust Gases!

Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is odorless, colorless, and can cause death if inhaled. Avoid inhaling exhaust fumes, and never run the engine in a closed building or confined area.

 WARNING

Explosive Gas can cause fires and severe acid burns. Charge battery only in a well ventilated area. Keep sources of ignition away.

Explosive Gas!

Batteries produce explosive hydrogen gas while being charged. To prevent a fire or explosion, charge batteries only in well ventilated areas. Keep sparks, open flames, and other sources of ignition away from the battery at all times. Keep batteries out of the reach of children. Remove all jewelry when servicing batteries.

Before disconnecting the negative (-) ground cable, make sure all switches are OFF. If ON, a spark will occur at the ground cable terminal which could cause an explosion if hydrogen gas or gasoline vapors are present.

Congratulations – You have selected a fine four-cycle, twin cylinder, air-cooled engine. Kohler designs long life strength and on-the-job durability into each engine...making a Kohler engine dependable...dependability you can count on. Here are some reasons why:

- Efficient overhead valve design and full pressure lubrication provide maximum power, torque, and reliability under all operating conditions.
- Dependable, maintenance free electronic ignition ensures fast, easy starts time after time.
- Kohler engines are easy to service. All routine service areas (like the oil filter, dipstick, oil fill, air cleaner, spark plug, and carburetor) are easily and quickly accessible.
- Parts subject to the most wear and tear (like the cylinder liner and camshaft) are made from precision formulated cast iron.
- Every Kohler engine is backed by a worldwide network of over 10,000 distributors and dealers. Service support is just a phone call away. Call 1-800-544-2444 (U.S. & Canada) for Sales & Service assistance. Or visit www.KohlerEngines.com.

To keep your engine in top operating condition, follow the maintenance procedures in this manual.

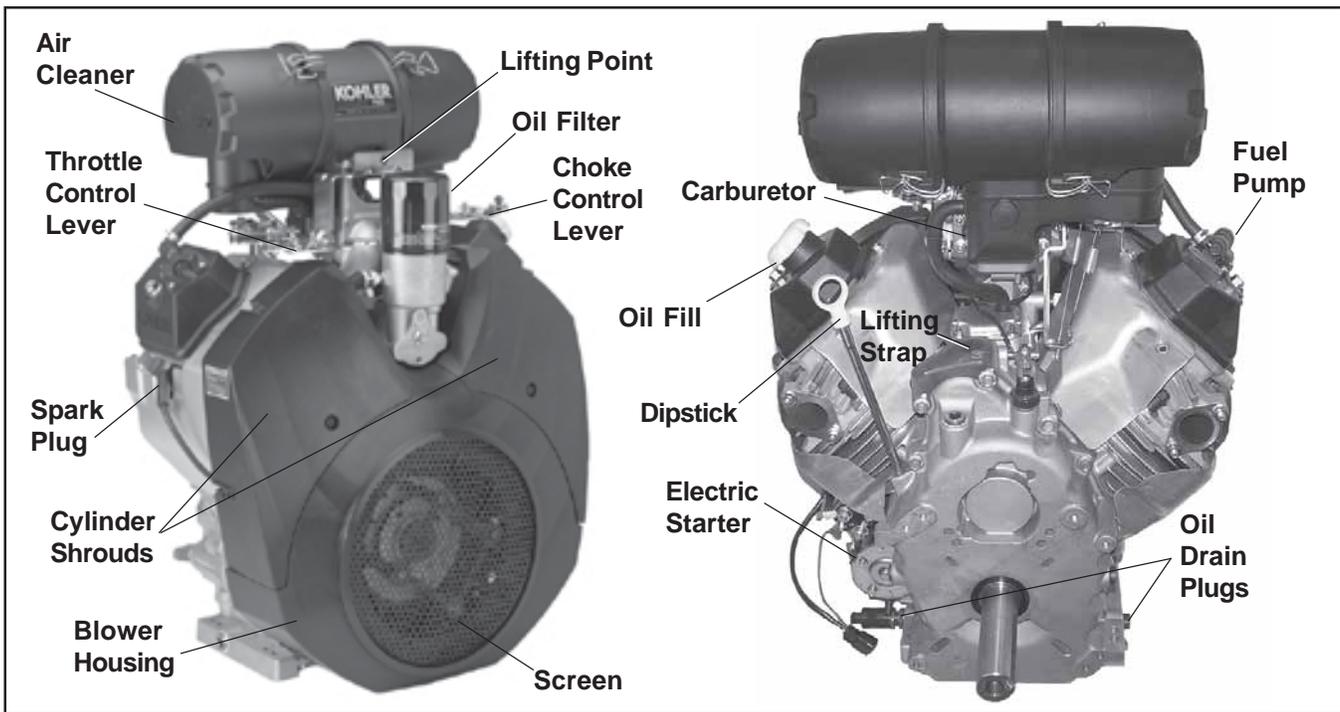


Figure 1. Typical Command PRO Horizontal Shaft Engine.

Oil Recommendations

Using the proper type and weight of oil in the crankcase is extremely important. So is checking oil daily and changing oil regularly. It is also recommended that a consistent brand of oil be used. Failure to use the correct oil, or using dirty oil, causes premature engine wear and failure.

Oil Type

Use high quality detergent oil of API (American Petroleum Institute) service class SJ or higher. Select the viscosity based on the air temperature at the time of operation as shown in the following table.

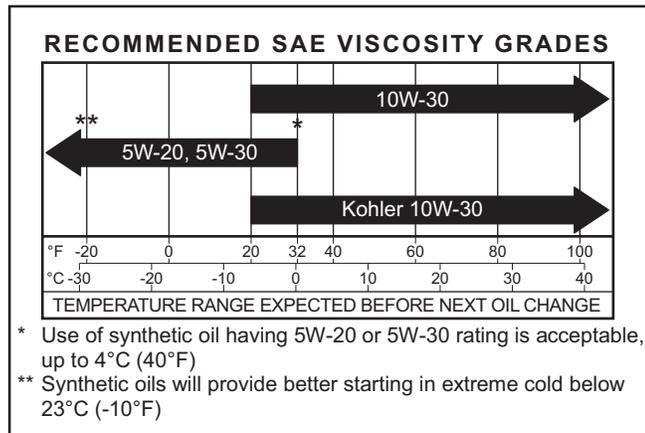


Figure 2. Viscosity Grades Table.

NOTE: Synthetic oils meeting the listed classifications may be used with oil changes performed at the recommended intervals. However to allow piston rings to properly seat, a new or rebuilt engine should be operated for at least 50 hours using standard petroleum based oil before switching to synthetic oil.

A logo or symbol on oil containers identifies the API service class and SAE viscosity grade. See Figure 3.



Figure 3. Oil Container Logo.

Refer to **Maintenance Instructions** beginning on page 8 for detailed oil check, oil change, and oil filter change procedures.

NOTE: Using other than service class SJ or higher oil or extending oil change intervals longer than recommended can cause engine damage.

Fuel Recommendations

WARNING: Explosive Fuel!

Gasoline is extremely flammable and its vapors can explode if ignited. Store gasoline only in approved containers, in well ventilated, unoccupied buildings, away from sparks or flames. Do not fill the fuel tank while the engine is hot or running, since spilled fuel could ignite if it comes in contact with hot parts or sparks from ignition. Do not start the engine near spilled fuel. Never use gasoline as a cleaning agent.

General Recommendations

Purchase gasoline in small quantities that can be used within 30 days and store only in clean, approved containers. Do not use gasoline left over from the previous season unless treated with a fuel stabilizer (refer to **Storage**), to minimize gum deposits and ensure easy starting. Do not use gasoline containing Methanol, or add oil to the gasoline.

Do not overfill the fuel tank. Leave room for the fuel to expand.

Fuel Type

For best results use only clean, fresh, **unleaded** gasoline with a pump sticker octane rating of 87 or higher. In countries using the Research method, it should be 90 octane minimum.

Unleaded gasoline is recommended as it leaves less combustion chamber deposits and reduces harmful exhaust emissions. Leaded gasoline is not recommended and **must not** be used in any models where exhaust emissions are regulated.

Gasoline/Alcohol blends

Gasohol (up to 10% ethyl alcohol, 90% unleaded gasoline by volume) is approved as a fuel for Kohler engines. Other gasoline/alcohol blends including E20 and E85 are not to be used and not approved. Any failures resulting from use of these fuels will not be warranted.

Gasoline/Ether blends

Methyl Tertiary Butyl Ether (MTBE) and unleaded gasoline blends (up to a maximum of 15% MTBE by volume) are approved as a fuel for Kohler engines. Other gasoline/ether blends are not approved.

Engine Identification Numbers

When ordering parts, or in any communication involving an engine, always give the **Model, Specification, and Serial Numbers** of the engine.

The engine identification numbers appear on a decal affixed to the engine shrouding. Include letter suffixes, if there are any.

Record your engine identification numbers on the identification label below (Figure 4) for future reference.

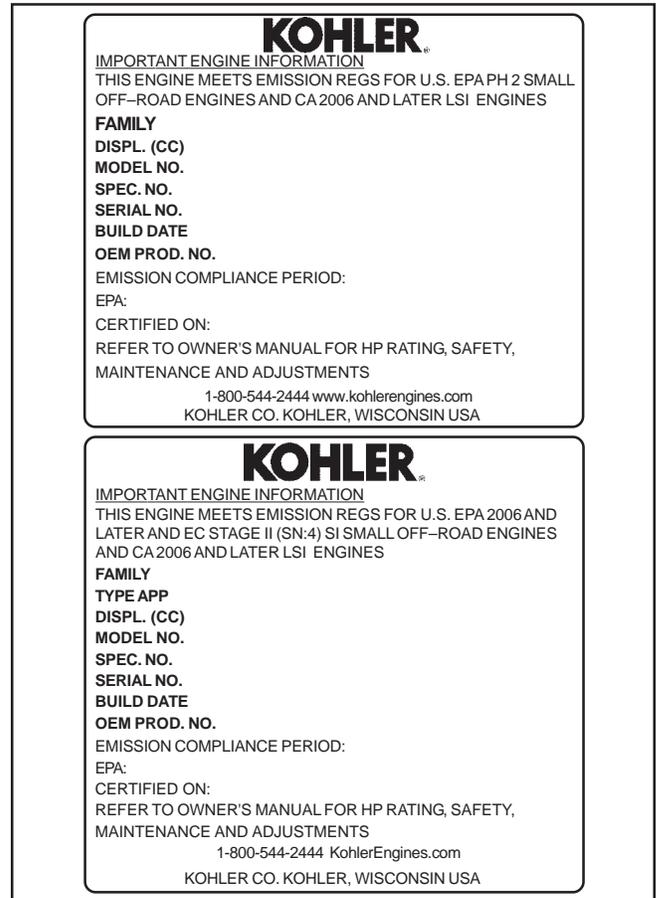


Figure 4. Engine Identification Label.

The Emission Compliance Period referred to on the Emission Control or Air Index label indicates the number of operating hours for which the engine has been shown to meet Federal emission requirements. The following table provides the Engine Compliance Period (in hours) associated with the category descriptor found on the certification label.

Emission Compliance Period (Hours)

EPA	Category A 1000 hours
-----	--------------------------

Refer to certification label for engine displacement.

Exhaust Emission Control System for models CH940-CH1000 is EM.

Model Designation

Model CH980 for example: C designates Command engine, H designates horizontal crankshaft, and 980 indicates the numerical model designation. A letter suffix designates a specific version as follows:

Suffix	Designates
S	Electric Start

Operating Instructions

Also read the operating instructions of the equipment this engine powers.

Pre-Start Checklist

- Check oil level. Add oil if low. Do not overfill.
- Check fuel level. Add fuel if low.
- Check cooling air intake areas and external surfaces of engine. Make sure they are clean and unobstructed.
- Check that the air cleaner components and all shrouds, equipment covers, and guards are in place and securely fastened.
- Check that any clutches or transmissions are disengaged or placed in neutral. This is especially important on equipment with hydrostatic drive. The shift lever must be exactly in neutral to prevent resistance which could keep the engine from starting.

Throttle and Choke Control Linkage Setup

The throttle and choke levers on these engines allow remote mounted control operation from either side. The linkage for the throttle and choke is connected in one of the two available hole locations; *A* or *B* in the control levers. Hole location *A* in each lever is used for **Outer Pull** actuation. Hole Location *B* used for **Inner Pull** actuation. Most engines will have the control linkage connected in Location *A*, the primary location. If the application requires opposite side control direction or function, unhook the link(s) from the small clip and reconnect in the other hole location. See Figures 5 and 6.

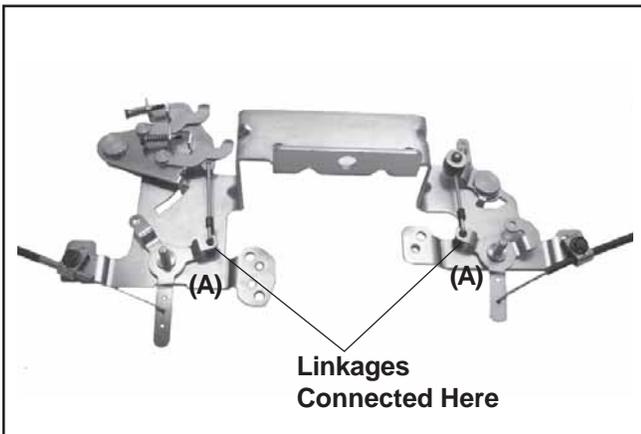


Figure 5. Throttle and Choke Control Linkage in Outer Pull Configuration.

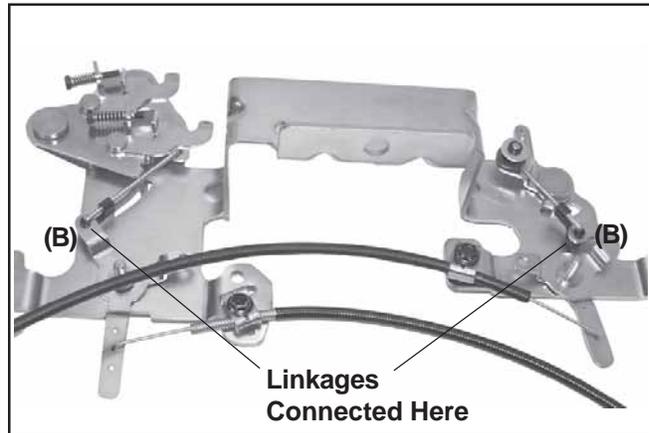


Figure 6. Throttle and Choke Control Linkage in Inner Pull Configuration.



WARNING: Lethal Exhaust Gases!

Engine exhaust gases contain poisonous carbon monoxide. Carbon monoxide is odorless, colorless, and can cause death if inhaled. Avoid inhaling exhaust fumes, and never run the engine in a closed building or confined area.

Cold Weather Starting Hints

1. Be sure to use the proper oil for the temperature expected. See Figure 2 on page 4.
2. Disengage all possible external loads.
3. Be sure the battery is in good condition. A warm battery has much more starting capacity than a cold battery.
4. Use fresh winter grade fuel. NOTE: Winter grade gasoline has higher volatility to improve starting. Do not use gasoline left over from summer.

Starting

1. Place the throttle control **midway** between the **SLOW** and **FAST** positions. Place the choke control into the **ON** position. See Figures 7 and 8.

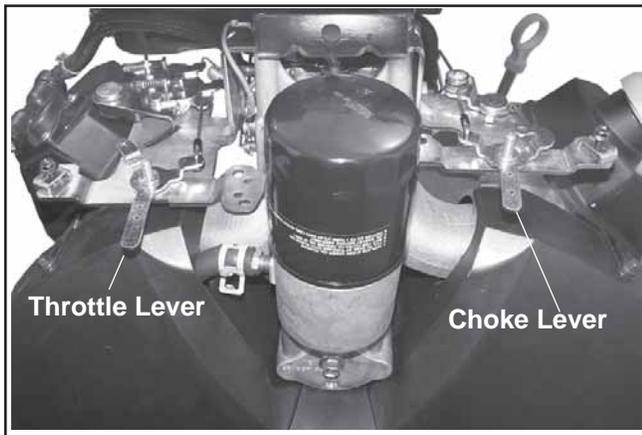


Figure 7. Location of Control Levers.



Figure 8. Optional Control Panel with Engine Mounted Controls.

2. Start the engine by activating the key switch. Release the switch as soon as the engine starts.

NOTE: Do not crank the engine continuously for more than 10 seconds at a time. If the engine does not start, allow a 60 second cool down period between starting attempts. Failure to follow these guidelines can burn out, or permanently damage, the starter motor.

NOTE: Upon start-up, a metallic ticking may occur. This is caused by hydraulic lifter leakdown during storage. Run the engine for 5 minutes. The noise will normally cease in the first minute. If noise continues, run the engine at mid-throttle for 20 minutes. If noise persists, take the engine to your local authorized Kohler Engine Service Dealer.

NOTE: If the engine develops sufficient speed to disengage the starter but does not keep running (a false start), engine rotation must be allowed to come to a complete stop before attempting to restart the engine. If the starter is engaged while the flywheel is rotating, the starter pinion and flywheel ring gear may clash resulting in damage to the starter.

If the starter does not turn the engine over, shut off starter immediately. Do not make further attempts to start the engine until the condition is corrected. Do not jump start using another battery (refer to **Battery** on this page). See your Kohler Engine Service Dealer for service assistance.

3. **For a Cold Engine** – Gradually return the choke control to the **OFF** position after the engine starts and warms up.

The engine/equipment may be operated during the warm-up period, but it may be necessary to leave the choke partially on until the engine warms up.

4. **For a Warm Engine** – Return choke to **OFF** position as soon as engine starts.

Stopping

1. Remove the load by disengaging all PTO driven attachments.
2. Position the throttle control somewhere between half and full throttle; then stop the engine.

Battery

A 12 volt battery is normally used. Refer to the operating instructions of the equipment this engine powers for specific battery requirements.

If the battery charge is not sufficient to crank the engine, recharge the battery (see page 14).

Operating

Angle of Operation

This engine will operate continuously at angles up to 25°. Check oil level to assure crankcase oil level is at the **F** mark on the dipstick.

Refer to the operating instructions of the equipment this engine powers. Because of equipment design or application, there may be more stringent restrictions regarding the angle of operation.

NOTE: Do not operate this engine continuously at angles exceeding 25° in any direction. Engine damage could result from insufficient lubrication.

Cooling

NOTE: If debris builds up on the grass screen or other cooling air intake areas, stop the engine immediately and clean. Operating the engine with blocked or dirty air intake and cooling areas can cause extensive damage due to overheating.

**WARNING: Hot Parts!**

Engine components can get extremely hot from operation. To prevent severe burns, do not touch these areas while the engine is running, or immediately after it is turned off. Never operate the engine with heat shields or guards removed.

Engine Speed

NOTE: Do not tamper with the governor setting to increase the maximum engine speed. Overspeed is hazardous and will void the engine warranty. The maximum allowable high idle speed for these engines is 3900 RPM, no load.

Maintenance Instructions

Maintenance, repair, or replacement of the emission control devices and systems, which are being done at the customers expense, may be performed by any non-road engine repair establishment or individual. Warranty repairs must be performed by an authorized Kohler service outlet.

**WARNING: Accidental Starts!**

Disabling engine. Accidental starting can cause severe injury or death. Before working on the engine or equipment, disable the engine as follows: 1) Disconnect the spark plug lead(s). 2) Disconnect negative (-) battery cable from battery.

Maintenance Schedule

These required maintenance procedures should be performed at the frequency stated in the table. They should also be included as part of any seasonal tune-up.

Frequency	Maintenance
Daily or Before Starting Engine	<ul style="list-style-type: none"> • Fill fuel tank. • Check oil level. • Check air cleaner for dirty¹, loose, or damaged parts. • Check air intake and cooling areas, clean as necessary.
Weekly	<ul style="list-style-type: none"> • Check filter minder or heavy-duty air cleaner element.
Every 25 Hours	<ul style="list-style-type: none"> • Service precleaner¹ (flat air cleaner).
Seasonally or Every 150 Hours	<ul style="list-style-type: none"> • Replace air cleaner element¹ (flat air cleaner). • Check heavy-duty air cleaner element. • Replace fuel filter. • Change oil. Oil filter is recommended. (More frequently under severe conditions.) • Remove cooling shrouds and clean cooling areas¹. • Check oil cooler fins, clean as necessary.
Every 200 Hours	<ul style="list-style-type: none"> • Check spark plug condition and gap.
Seasonally or Every 300 Hours	<ul style="list-style-type: none"> • Change oil filter. • Replace heavy-duty air cleaner element.
Yearly or Every 500 Hours	<ul style="list-style-type: none"> • Have solenoid shift starter disassembled and cleaned. • Have crankshaft splines lubricated².
Every 600 Hours	<ul style="list-style-type: none"> • Replace heavy-duty inner air cleaner element. • Replace spark plugs.

¹Perform these maintenance procedures more frequently under extremely dusty, dirty conditions.

²Have a Kohler Engine Service Dealer perform this service.

Check Oil Level

The importance of checking and maintaining the proper oil level in the crankcase cannot be overemphasized. Check oil **BEFORE EACH USE** as follows:

1. Make sure the engine is stopped, level, and is cool so the oil has had time to drain into the sump.

2. To keep dirt, debris, etc., out of the engine, clean the area around the dipstick before removing it.
3. Remove the dipstick; wipe oil off. Reinsert the dipstick into the tube and press all the way down.

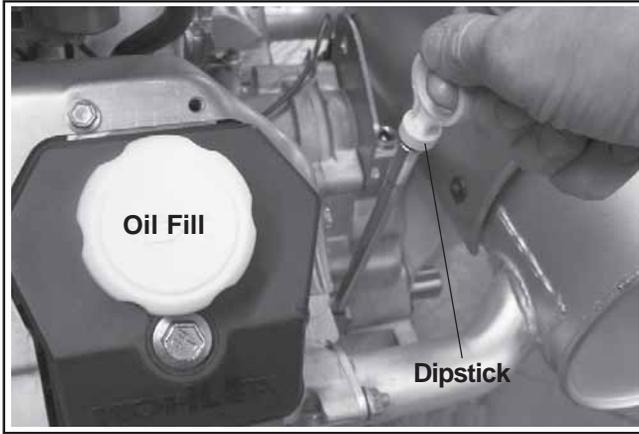


Figure 9. Dipstick and Oil Fill.

- Remove the dipstick and check the oil level. The oil level should be up to, but not over, the F mark on the dipstick. See Figure 10.

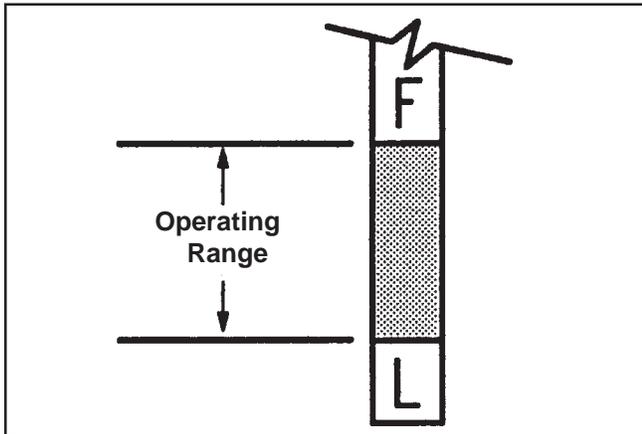


Figure 10. Oil Level Marks on Dipstick.

- If the level is low, remove the cap from the valve cover and add oil of the proper type, up to the F mark on the dipstick. (Refer to **Oil Type** on page 4.) Always check the level with the dipstick before adding more oil.

NOTE: To prevent extensive engine wear or damage, always maintain the proper oil level in the crankcase. Never operate the engine with the oil level below the L mark or over the F mark on the dipstick.

Oil Sentry™

Most engines are equipped with an Oil Sentry™ oil pressure switch. On pressure switch equipped models, if the oil pressure decreases below an acceptable level, the Oil Sentry™ will either shut off the engine or activate a warning signal, depending on the application. See Figure 11.



Figure 11. Oil Sentry™ Pressure Switch.

NOTE: Make sure the oil level is checked **BEFORE EACH USE** and is maintained up to the F mark on the dipstick. This includes engines equipped with Oil Sentry™ systems.

Change Oil and Filter, Service Oil Cooler

Change Oil

Change oil seasonally or every 150 hours of operation, (more frequently under severe conditions). Refill with service class SJ or higher oil as specified in the **Viscosity Grades** table (Figure 2) on page 4.

Change the oil while the engine is still warm. The oil will flow more freely and carry away more impurities. Make sure the engine is level when filling, checking, and changing the oil.

Change the oil as follows (see Figures 12 and 13):

- To keep dirt, debris, etc., out of the engine, clean the area around the oil fill cap, dipstick and one of the drain plugs.
- Remove one of the oil drain plugs, oil fill cap, and dipstick. Be sure to allow ample time for complete drainage.
- Reinstall the drain plug. Make sure it is tightened to 21.4 N·m (15.7 ft. lb.) torque.
- Fill the crankcase, with new oil of the proper type, to the F mark on the dipstick. Refer to **Oil Type** on page 4. Always check the level with the dipstick before adding more oil.
- Reinstall the oil fill cap and tighten securely. Reinstall dipstick.

NOTE: To prevent extensive engine wear or damage, always maintain the proper oil level in the crankcase. Never operate the engine with the oil level below the L mark or over the F mark on the dipstick.

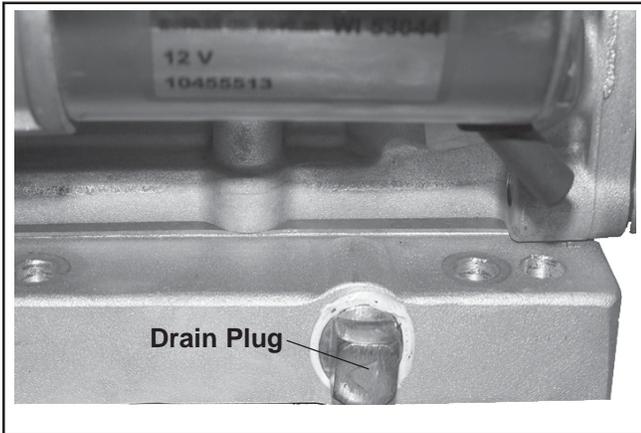


Figure 12. Oil Drain Plug (Starter Side).

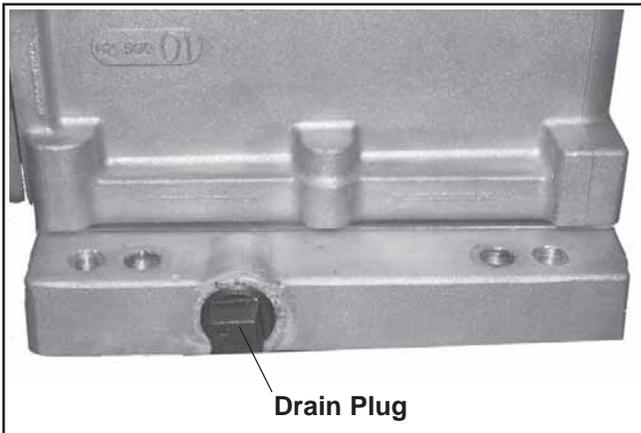


Figure 13. Oil Drain Plug (No. 2 Side).

Change Oil Filter

The oil filter on most engines is located on top of the crankcase between the cylinders. Some models use a remote mounted oil filter. See Figures 14 and 15. Replace the oil filter **seasonally (150 hours), or at least every other oil change (every 300 hours of operation).** *Always use a genuine Kohler oil filter, Part No. 52 050 02-S.*

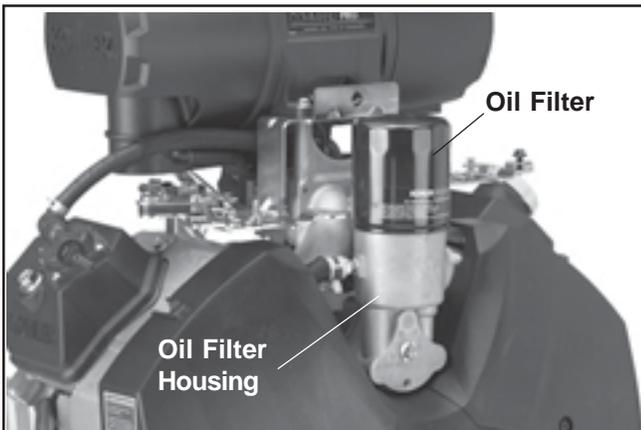


Figure 14. Engine Mounted Oil Filter.



Figure 15. Optional Remote Mounted Oil Filter.

Replace the oil filter as follows:

1. Before removing the oil filter, clean the area around the oil filter and housing to keep dirt and debris out of the engine. Remove the old filter. On crankcase mounted oil filter housings, a spring loaded inner cup allows automatic oil drainback into the crankcase as the oil filter is removed. Wipe off the surface where the oil filter mounts.
2. Drain the oil from the engine crankcase.
3. Allow ample time for the oil to drain from the crankcase.
4. Reinstall the drain plug and torque to **21.4 N·m (15.7 ft. lb.)**.
5. Apply a thin film of clean oil to the rubber gasket on the new filter.
6. Install the replacement oil filter. Turn the oil filter clockwise until the rubber gasket contacts the oil filter housing (not inner cup), then tighten the filter an additional **3/4 to 1 turn**.
7. Fill the crankcase with new oil of the proper type to the F mark on the dipstick.
8. Start the engine and check for oil leaks. Correct any leaks before placing the engine into service. Check oil level to be sure it is up to but not over the F mark.

Service Oil Cooler

Engines are equipped with an oil cooler mounted under the No. 2 side cylinder shroud, separate from the oil filter (see Figure 16).

Inspect and clean the oil cooler **every 150 hours of operation** (more frequently under severe conditions). Oil cooler must be kept free of debris.

To access and service the oil cooler, remove the top mounting screw and loosen the two side screws, then lift off the No. 2 side cylinder shroud. If required, remove the two screws holding the oil cooler to the blower housing. Pull the cooler away from the blower housing. Clean both sides of the cooler with a brush as shown in Figures 17 and 18, or with compressed air. After cleaning, reattach the oil cooler to the lower blower housing with the two mounting screws.

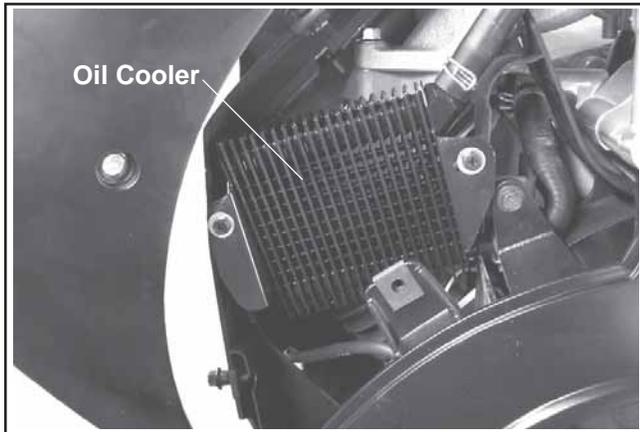


Figure 16. Oil Cooler.



Figure 17. Cleaning Top of Oil Cooler.



Figure 18. Cleaning Underside of Oil Cooler.

Air Cleaners

These engines use a heavy-duty style air cleaner (see Figure 19) or a flat air cleaner (see Figure 23). These systems are CARB/EPA certified and the components should not be altered or modified in any way.

NOTE: Lift or move this engine using the lifting strap and lifting point shown in Figure 1. DO NOT lift the engine by the air cleaner.

Heavy-Duty Air Cleaner

The heavy-duty air cleaner consists of a cylindrical housing mounted to the carburetor and intake manifold. The housing contains a paper element and inner element, designed for longer service intervals.



Figure 19. Heavy-Duty Style Air Cleaner.

Service

Weekly and every 150 hours: Check filter minder (if equipped), unhook the two retaining clips on each end and remove the end caps. Perform inspection of the paper element and inlet screen area.

Seasonally or every 300 hours of operation (more often under extremely dusty or dirty conditions), replace the paper element and check the inner element. Follow these steps.

1. Unhook the two retaining clips on each end and remove the end caps from the air cleaner housing.
2. Check and clean the screen area on the inlet side. Pull the air cleaner paper element out of the housing on opposite side. See Figures 20 and 21.

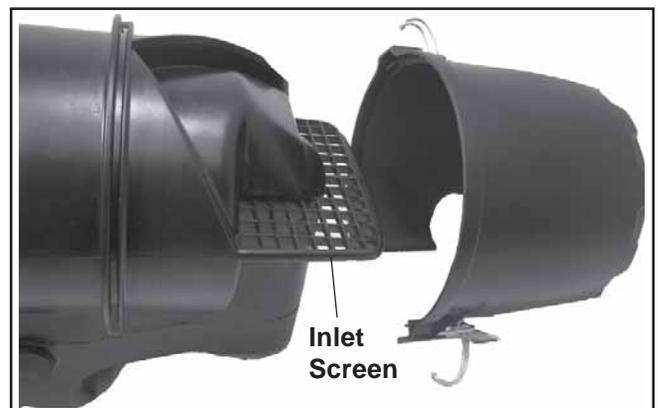


Figure 20. Accessing Inlet Screen.

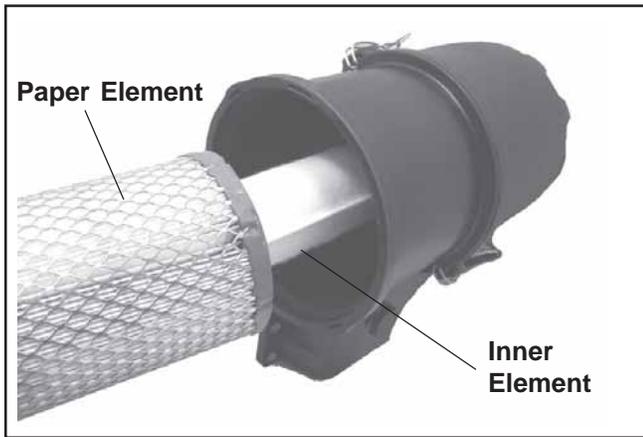


Figure 21. Removing Elements.

3. After the paper element is removed, check the condition of the inner element. It should be replaced whenever it appears dirty, typically every other time the paper element is replaced or every **600 hours**. Clean the area around the base of the inner element before removing it, so dirt does not get into the engine.
4. **Do not** wash the paper element and inner element or use compressed air, this will damage the elements. Replace dirty, bent or damaged elements with new genuine Kohler elements as required. Handle the new elements carefully; do not use if the sealing surfaces are bent or damaged.
5. Check all parts for wear, cracks, or damage, and make sure ejector area is clean. See Figure 22. Replace any damaged components.



Figure 22. Ejector Area.

6. Install the new inner element, Kohler Part No. **25 083 04-S** followed by the paper element, Part No. **25 083 01-S**. Slide each fully into place in the air cleaner housing.
7. Reinstall the end caps and secure with the retaining clips. See Figure 19.

Flat Air Cleaner

The flat air cleaner has a replaceable, high density paper air cleaner element. Some engines are also equipped with an oiled, foam precleaner which surrounds the paper element. See Figure 23.

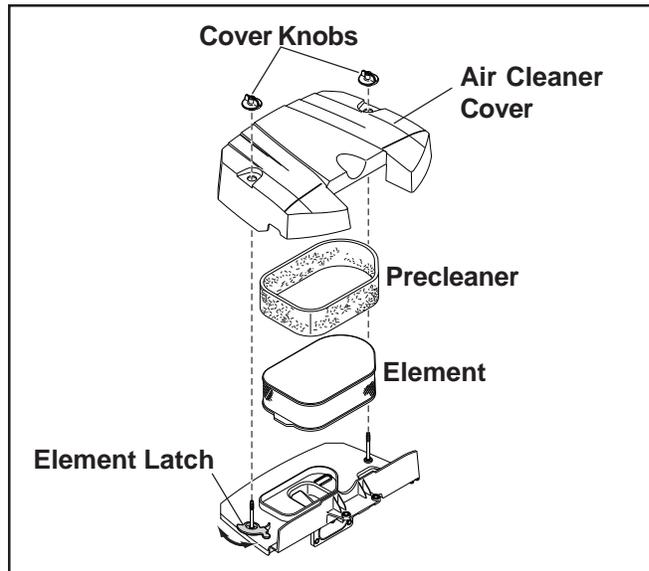


Figure 23. Flat Air Cleaner.

Service Precleaner

If so equipped, wash and reoil the precleaner every **25 hours** of operation (more often under extremely dusty or dirty conditions).

1. Loosen the cover retaining knobs and remove the cover.
2. Remove the precleaner from the paper element.
3. Wash the precleaner in warm water with detergent. Rinse the precleaner thoroughly until all traces of detergent are eliminated. Squeeze out excess water (do not wring). Allow the precleaner to air dry.
4. Saturate the precleaner with new engine oil. Squeeze out all excess oil.
5. Reinstall the precleaner over the paper element.
6. Reinstall the air cleaner cover. Secure cover with the cover retaining knobs.
7. When precleaner replacement is necessary, order genuine Kohler parts.

Service Paper Element

Every **150 hours** of operation (more often under extremely dusty or dirty conditions) replace the paper element.

1. Loosen the cover retaining knobs and remove the cover.
2. Rotate the element latch to release the element.
3. Remove the paper element with precleaner.
4. Remove the precleaner (if so equipped) from the paper element. Service the precleaner as described above.
5. **Do not wash the paper element or use pressurized air**, as this will damage the element. Replace a dirty, bent, or damaged element with a genuine Kohler element. Handle new elements carefully; do not use if the sealing surfaces are bent or damaged.
6. When servicing the air cleaner, check the air cleaner base. Make sure it is secured and not bent or damaged. Replace all damaged air cleaner components.

NOTE: If any loose dirt or debris fell on the air cleaner base when the element was removed, carefully remove it and wipe the base clean. Be careful that none of it drops into the intake throat.

7. Reinstall the paper element with precleaner. Rotate the element latch to secure the element.
8. Reinstall the air cleaner cover. Secure cover with the cover retaining knobs.
9. When element replacement is necessary, order genuine Kohler parts.

Clean Air Intake/Cooling Areas

To ensure proper cooling, make sure the grass screen, cooling fins, and other external surfaces of the engine are kept clean **at all times**.

NOTE: Operating the engine with a blocked grass screen, dirty or plugged cooling fins, and/or cooling shrouds removed, will cause engine damage due to overheating.

Ignition System

An electronic Capacitive Discharge (CD) ignition system is used. Other than periodically checking/replacing the spark plugs, no maintenance, timing, or adjustments are necessary or possible with this system.

Check Spark Plugs

Every **200 hours** of operation, remove the spark plugs, check condition, and reset the gap. Replace with new plugs every **600 hours**, or as necessary. The standard spark plug is a Champion® XC10YC (Kohler Part No. 62 132 04-S). Equivalent alternate brand plugs can also be used.

1. Before removing the spark plug, clean the area around the base of the plug to keep dirt and debris out of the engine.
2. Remove the plug and check its condition. Replace the plug if worn or reuse is questionable.

NOTE: Do not clean the spark plug in a machine using abrasive grit. Some grit could remain in the spark plug and enter the engine causing extensive wear and damage.

3. Check the gap using a wire feeler gauge. Adjust the gap to **0.76 mm (0.030 in.)** by carefully bending the ground electrode. See Figure 24.

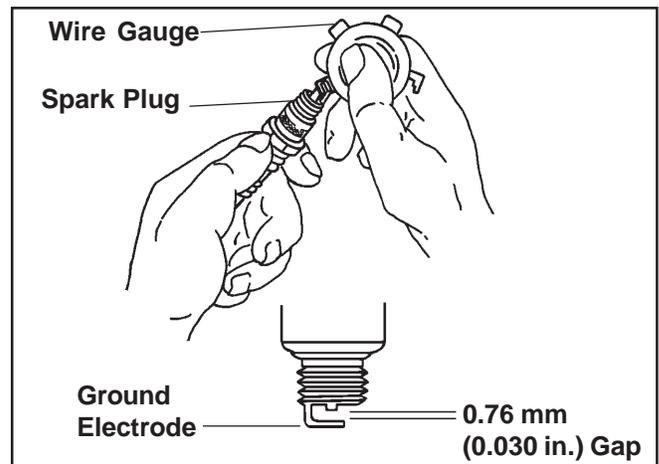


Figure 24. Servicing Spark Plug.

4. Reinstall the spark plug into the cylinder head. Torque the spark plug to **24.4-29.8 N·m (18-22 ft. lb.)**.

Battery Charging



WARNING: Explosive Gas!

Batteries produce explosive hydrogen gas while being charged. To prevent a fire or explosion, charge batteries only in well ventilated areas. Keep sparks, open flames, and other sources of ignition away from the battery at all times. Keep batteries out of the reach of children. Remove all jewelry when servicing batteries.

Before disconnecting the negative (-) ground cable, make sure all switches are OFF. If ON, a spark will occur at the ground cable terminal which could cause an explosion if hydrogen gas or gasoline vapors are present.

NOTE: Do not apply 12 volt DC to kill terminal of ignition module.

Fuel System

Fuel Filter

Most engines are equipped with an in-line fuel filter. Periodically inspect the filter and replace with a genuine Kohler filter **seasonally or every 150 operating hours**.

Fuel Line

These engines use Low Permeation SAE 30 R7 rated fuel line; certified to meet emission requirements. Standard fuel line may not be used. Order replacement hose by part number through a Kohler Engine Service Dealer.



Figure 25. Low Permeation Fuel Line.

Carburetor Troubleshooting and Adjustments

These engines use a Keihin BK two-barrel carburetor with fixed main jets, and fixed or limiter-equipped low idle fuel adjusting needles. See Figure 26. In compliance with government emission standards, the carburetor is calibrated to deliver the correct fuel-to-air mixture to the engine under all operating conditions. Adjustments are made as follows.

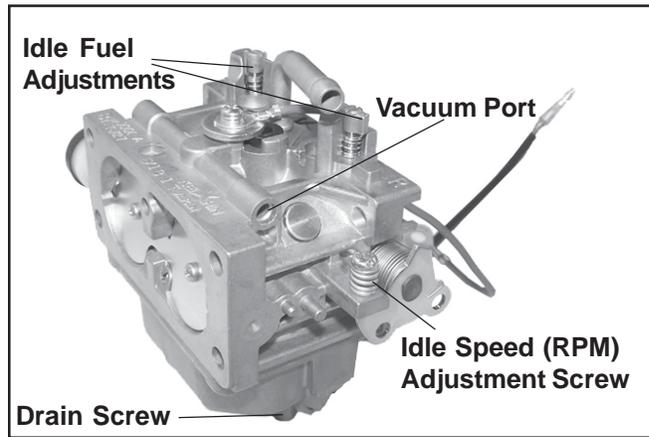


Figure 26. Keihin Two-Barrel Carburetor.

NOTE: Carburetor adjustments should be made only after the engine has warmed up.

NOTE: To ensure correct engine operation at altitudes above 1525 meters (5000 ft.), it may be necessary to have an authorized Kohler dealer install a special high-altitude jet kit in the carburetor. If a high-altitude kit has been installed, the engine must be reconverted to the original jet size, before it is operated at lower altitudes, or overheating and engine damage can result.

Troubleshooting

If engine troubles are experienced that appear to be fuel system related, check the following areas before adjusting the carburetor.

- Make sure the fuel tank is filled with clean, fresh gasoline.
- Make sure the fuel tank cap vent is not blocked and that it is operating properly.
- If the fuel tank is equipped with a shut-off valve, make sure it is open.
- If the engine is equipped with an in-line fuel filter, make sure it is clean and unobstructed. Replace the filter if necessary.
- Make sure fuel is reaching the carburetor. This includes checking the fuel lines and fuel pump for restrictions or faulty components, replace as necessary.
- Make sure the air cleaner element is clean and all air cleaner element components are fastened securely.

If, after checking the items listed above, the engine is hard to start, runs roughly, or stalls at low idle speed, it may be necessary to adjust or service the carburetor.

Adjust Carburetor

Low Idle Speed (RPM) and Governed Idle Adjustment

1. **Low Idle Speed (RPM) Setting:** Place the throttle control into the **idle** or **slow** position. Hold the governor lever away from carburetor so the throttle lever is against the Idle Speed (RPM) Adjustment Screw of carburetor. See Figure 26. Set the low idle speed to **1200 RPM*** (± 75 RPM) by turning the low idle speed adjusting screw on carburetor **in** or **out**. Check the speed using a tachometer.

*NOTE: The actual low idle speed depends on the application. Refer to the equipment manufacturer's recommendations. The low idle speed for basic engines is 1200 RPM. To ensure best results when setting the low idle fuel needle, the low idle speed should be 1200 RPM (± 75 RPM).

2. Release the governor lever and check that the throttle lever is in the **idle** position. Turn the governed idle (outer) adjustment screw on main control bracket to obtain the equipment manufacturer's recommended idle speed (1400-1800 RPM). See Figure 27.

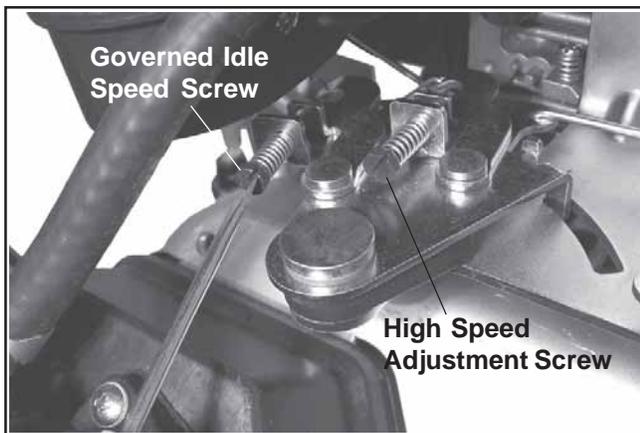


Figure 27. Adjusting Governed Idle Speed Screw.

Low Idle Fuel Adjustment

NOTE: Engines will have fixed low idle or limiter caps on the two idle fuel adjusting needles. Step 3 can only be performed within the limits allowed by the cap. Do not attempt to remove the limiter caps.

1. Start the engine and run at half throttle for 5 to 10 minutes to warm up. The engine must be warm before doing steps 2, 3 and 4.

2. Place the throttle control into the **idle** or **slow** position. Adjust the low idle speed to **1200 RPM***.

Follow the **Adjusting the Low Idle Speed (RPM)** procedure.

3. **Low Idle Fuel Needle(s) Setting:** Place the throttle into the **idle** or **slow** position.
 - a. Turn one of the low idle fuel adjusting needles out (counterclockwise) from the preliminary setting until the engine speed decreases (rich). Note the position of the needle. Now turn the adjusting needle in (clockwise). The engine speed may increase, then it will decrease as the needle is turned **in** (lean). Note the position of the needle. Set the adjusting needle midway between the rich and lean settings. See Figure 28.
 - b. Repeat the procedure on the other low idle adjustment needle.
4. Recheck/adjust the **Low Idle Speed (RPM)**, to the specified setting.

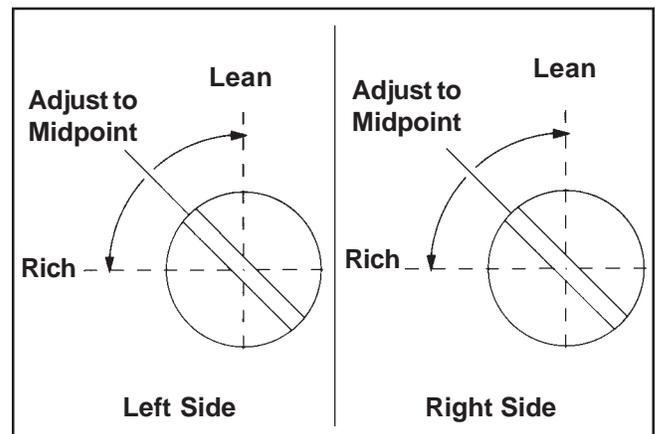


Figure 28. Optimum Low Idle Fuel Settings.

High Speed (RPM) Adjustment

The high speed RPM (inner) adjustment screw is preset at the factory and normally does not need readjustment.

Troubleshooting

When troubles occur, be sure to check the simple causes which, at first, may seem too obvious to be considered. For example, a starting problem could be caused by an empty fuel tank. Some common causes of engine troubles are listed in the following table.

Do not attempt to service or replace major engine components, or any items that require special timing or adjustment procedures. Have your Kohler Engine Service Dealer do this work.

Possible Cause Problem	No Fuel	Improper Fuel	Dirt In Fuel Line/System	Dirty Grass Screen	Incorrect Oil Level	Engine Overloaded	Dirty Air Cleaner	Faulty Spark Plug
Will Not Start	•	•	•		•	•	•	•
Hard Starting		•	•			•	•	•
Stops Suddenly	•		•	•	•	•	•	•
Lacks Power		•	•	•	•	•	•	•
Operates Erratically		•	•	•		•	•	•
Knocks or Pings		•		•		•		•
Skips or Misfires		•	•	•			•	•
Backfires		•	•			•	•	•
Overheats		•	•	•	•	•	•	
High Fuel Consumption						•	•	•

Storage

If the engine will be out of service for 30 days or more, use the following storage procedure:

1. Clean the exterior surfaces of the engine. Avoid spraying water at the wiring harness or any of the electrical components.
2. Change the oil and filter while the engine is still warm from operation. Refer to **Change Oil** and **Change Oil Filter** on pages 9 and 10.
3. The fuel system must be completely emptied, or the gasoline must be treated with a stabilizer to prevent deterioration. If you choose to use a stabilizer, follow the manufacturer's recommendations, and add the correct amount for the capacity of the fuel system. Fill the fuel tank with clean, fresh gasoline. Run the engine for 2-3 minutes to get stabilized fuel into the rest of the system. Close fuel shut-off valve when unit is being stored or transported.

To empty the system, run the engine until the tank and fuel system are empty.

4. Remove the spark plugs. Add one tablespoon of engine oil into each spark plug hole. Install the plugs, but do not connect the plug leads. Crank the engine two or three revolutions.
5. Store the engine in a clean, dry place.

Parts Ordering

The engine Specification, Model, and Serial Numbers are required when ordering replacement parts from your Kohler Engine Service Dealer. These numbers are found on the identification plate which is affixed to the engine shrouding. Include letter suffixes if there are any. Refer to **Engine Identification Numbers** on page 5.

Always insist on genuine Kohler parts. All genuine Kohler parts meet strict standards for fit, reliability, and performance.

Major Repair

Major repair information is available in Kohler Engine Service Manuals. This type of repair generally requires the services of a trained mechanic and the use of special tools and equipment. Kohler Engine Service Dealers have the facilities, training, and genuine Kohler replacement parts necessary to perform this service.

For the nearest Sales & Service location:

- visit our website www.kohlerengines.com
- call 1-800-544-2444 (U.S. & Canada)
- look in the local telephone directory under Engines-Gasoline

Specifications

Model:	CH940	CH960	CH980	CH1000
Bore:	90 (3.54)	90 (3.54)	90 (3.54)	90 (3.54)
Stroke:	78.5 (3.1)	78.5 (3.1)	78.5 (3.1)	78.5 (3.1)
Displacement:	999 (61)	999 (61)	999 (61)	999 (61)
Power (@3600 RPM):	25.4 (34*)	26.9 (36*)	28.3 (38*)	29.8 (40*)
Compression Ratio:	8.8:1	8.8:1	8.8:1	8.8:1
Weight:	59.8 (132)	59.8 (132)	59.8 (132)	59.8 (132)
Oil Capacity (w/filter) - approximate, determined by oil filter used:	2.7 L (2.9 U.S. qt.)			
Lubrication:	Full Pressure w/full Flow Filter			

Exhaust Emission Control System for models CH940-CH1000 is EM.

*Horsepower ratings exceed Society of Automotive Engineers Small Engine Test Code J1940. Actual engine horsepower is lower and affected by, but not limited to, accessories (air cleaner, exhaust, charging, cooling, fuel pump, etc.), application, engine speed and ambient operating conditions (temperature, humidity, and altitude). Kohler reserves the right to change product specifications, designs and equipment without notice and without incurring obligation.

LIMITED 2 YEAR COMMAND PRO ENGINE WARRANTY

Kohler Co. warrants to the original consumer that each new COMMAND PRO engine sold by Kohler Co. will be free from manufacturing defects in materials or workmanship in normal service for a period of two (2) years from date of purchase, provided it is operated and maintained in accordance with Kohler Co.'s instructions and manuals.

Our obligation under this warranty is expressly limited, at our option, to the replacement or repair at Kohler Co., Kohler, Wisconsin 53044, or at a service facility designated by us of such parts as inspection shall disclose to have been defective.

EXCLUSIONS

Mufflers on engines used commercially (non-residential) are warranted for one (1) year from date of purchase, except catalytic mufflers, which are warranted for two (2) years.

This warranty does not apply to defects caused by casualty or unreasonable use, including faulty repairs by others and failure to provide reasonable and necessary maintenance.

The following items are not covered by this warranty:

Engine accessories such as fuel tanks, clutches, transmissions, power-drive assemblies, and batteries, unless supplied or installed by Kohler Co. These are subject to the warranties, if any, of their manufacturers.

KOHLER CO. AND/OR THE SELLER SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND, including but not limited to labor costs or transportation charges in connection with the repair or replacement of defective parts.

IMPLIED OR STATUTORY WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. We make no other express warranty, nor is any one authorized to make any on our behalf.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TO OBTAIN WARRANTY SERVICE

Purchaser must bring the engine to an authorized Kohler service facility. To locate the nearest facility, visit our website, www.kohlerengines.com, consult your local telephone directory, or telephone 1-800-544-2444.

ENGINE DIVISION, KOHLER CO., KOHLER, WISCONSIN 53044

KOHLER CO.
FEDERAL AND CALIFORNIA EMISSION CONTROL SYSTEMS
LIMITED WARRANTY
SMALL OFF-ROAD AND CLASS 1 LSI ENGINES

The U.S. Environmental Protection Agency (EPA), the California Air Resources Board (CARB), and Kohler Co. are pleased to explain the Federal and California Emission Control Systems Warranty on your off-road equipment engine. In California beginning in 2006, "emissions" means both exhaust and evaporative emissions. For California, small off-road engines produced in 2006 and later, and Class 1 LSI (Large Spark Ignited engines at or below 1.0 liter) produced in 2002 and later, must be designed, built and equipped to meet the state's stringent anti-smog standards. In other states, 1997 and later model year engines must be designed, built and equipped, to meet the U.S. EPA regulations for small non-road engines. The engine must be free from defects in materials and workmanship, which cause it to fail to conform with U.S. EPA standards for the first two years of engine use from the date of sale to the ultimate purchaser. Kohler Co. must warrant the emission control system on the engine for the period of time listed above, provided there has been no abuse, neglect or improper maintenance.

The emission control system may include parts such as the carburetor or fuel injection system, the ignition system, and catalytic converter. Also included are the hoses, belts and connectors and other emission-related assemblies.

Where a warrantable condition exists, Kohler Co. will repair the engine at no cost, including diagnosis (if the diagnostic work is performed at an authorized dealer), parts and labor.

MANUFACTURER'S WARRANTY COVERAGE

Small off-road engines produced in 2006 or later, and Class 1 LSI engines produced in 2002 and later, are warranted for two years in California. In other states, 1997 and later model year engines are warranted for two years. If any emission related part on the engine is defective, the part will be repaired or replaced by Kohler Co. free of charge.

OWNER'S WARRANTY RESPONSIBILITIES

- (a) The engine owner is responsible for the performance of the required maintenance listed in the owner's manual. Kohler Co. recommends that you retain all receipts covering maintenance on the engine, but Kohler Co. cannot deny warranty solely for the lack of receipts or for your failure to assure that all scheduled maintenance was performed.
- (b) Be aware, however, that Kohler Co. may deny warranty coverage if the engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.
- (c) For warranty repairs, the engine must be presented to a Kohler Co. service center as soon as a problem exists. Call 1-800-544-2444 or access our website at: www.kohlerengines.com, for the names of the nearest service centers. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

If you have any questions regarding warranty rights and responsibilities, you should contact Kohler Co. at 1-920-457-4441 and ask for an Engine Service representative.

COVERAGE

Kohler Co. warrants to the ultimate purchaser and each subsequent purchaser that the engine will be designed, built and equipped, at the time of sale, to meet all applicable regulations. Kohler Co. also warrants to the initial purchaser and each subsequent purchaser, that the engine is free from defects in materials and workmanship which cause the engine to fail to conform with applicable regulations for a period of two years.

Small off-road engines produced in 2006 or later, and Class 1 LSI engines produced in 2002 and later, are warranted for two years in California. For 1997 and later model years, EPA requires manufacturers to warrant engines for two years in all other states. These warranty periods will begin on the date the engine is purchased by the initial purchaser. If any emission related part on the engine is defective, Kohler Co. will replace the part at no cost to the owner. Kohler Co. is liable for damages to other engine components caused by the failure of a warranted part still under warranty.

Kohler Co. shall remedy warranty defects at any authorized Kohler Co. engine dealer or warranty station. Warranty repair work done at an authorized dealer or warranty station shall be free of charge to the owner if such work determines that a warranted part is defective.

Listed below are the parts covered by the Federal and California Emission Control Systems Warranty. Some parts listed below may require scheduled maintenance and are warranted up to the first scheduled replacement point for that part. The warranted parts include the following if they were present in the engine purchased:

- Oxygen sensor (if equipped)
- Intake manifold (if equipped)
- Exhaust manifold (if equipped)
- Catalytic muffler (if equipped)
- Thermal reactor muffler (if equipped)
- Fuel lines, fuel line fittings and clamps (if equipped)
- Spark advance module (if equipped)
- Crankcase breather
- Air Injection System (if equipped)
 - Air pump or pulse valve assembly (if equipped)
 - Control/distribution valve (if equipped)
 - Distribution manifold (if equipped)
 - Air hoses (if equipped)
 - Vacuum lines (if equipped)
- Ignition module(s) with high tension lead
- Gaseous fuel regulator (if equipped)
- Electronic control unit (if equipped)
- Carburetor or fuel injection system
- Fuel metering valve (if equipped)
- Air filter, fuel filter, and spark plugs (only to first scheduled replacement point)
- Evaporative System (if equipped)
 - Canister (if equipped)
 - Canister filter (if equipped)
 - Vapor hose (if equipped)
 - Orifice connector (if equipped)
 - Fuel tank (if equipped)
 - Fuel cap (if equipped)
 - Primer bulb canister (if equipped)

LIMITATIONS

This Emission Control Systems Warranty shall not cover any of the following:

- (a) repair or replacement required because of misuse or neglect, improper maintenance, repairs improperly performed or replacements not conforming to Kohler Co. specifications that adversely affect performance and/or durability and alterations or modifications not recommended or approved in writing by Kohler Co.,
- (b) replacement of parts and other services and adjustments necessary for required maintenance at and after the first scheduled replacement point,
- (c) consequential damages such as loss of time, inconvenience, loss of use of the engine or equipment, etc.,
- (d) diagnosis and inspection fees that do not result in eligible warranty service being performed, and
- (e) any add-on or modified part, or malfunction of authorized parts due to the use of add-on or modified parts.

MAINTENANCE AND REPAIR REQUIREMENTS

The owner is responsible for the proper use and maintenance of the engine. Kohler Co. recommends that all receipts and records covering the performance of regular maintenance be retained in case questions arise. If the engine is resold during the warranty period, the maintenance records should be transferred to each subsequent owner. Kohler Co. reserves the right to deny warranty coverage if the engine has not been properly maintained; however, Kohler Co. may not deny warranty repairs solely because of the lack of repair maintenance or failure to keep maintenance records.

Normal maintenance, replacement or repair of emission control devices and systems may be performed by any repair establishment or individual; however, **warranty repairs must be performed by a Kohler authorized service center.** Any replacement part or service that is equivalent in performance and durability may be used in non-warranty maintenance or repairs, and shall not reduce the warranty obligations of the engine manufacturer.

KOHLER[®] ENGINES

FOR SALES AND SERVICE INFORMATION
IN U.S. AND CANADA, CALL **1-800-544-2444**

KohlerEngines.com

ENGINE DIVISION, KOHLER CO., KOHLER, WISCONSIN 53044

FORM NO.:	62 590 01-A
-----------	-------------

ISSUED:	1/07
---------	------

REVISED:	4/09
----------	------

LITHO IN U.S.A.



1P62 590 01-A



6 50531 89982 8

M-B Companies, Inc.
1615 Wisconsin Ave.
P. O. Box 200
New Holstein, WI 53061-0200
(920) 898-1560 or 800-558-5800
FAX: (920) 898-4588

